CAR:LINK™

COMPLETE INSTALLATION & PROGRAMMING GUIDE

CLBTLR Digital RF Kit system

CAR:LINK™
BT Long Range System

This system must be installed by a professional.

NOTICE

The manufacturer will accept no responsability for any electrical damage resulting from improper installation of this product, be that either damage to the vehicle itself or to the installed device. This device must be installed by a certified technician. Please review the Installation Guide carefully before beginning any work.

CAR:LINK™ TABLE OF CONTENTS

CAR:LINK™ HARDWARE PARTS

⚠️ CREATE AN ACCOUNT

Before begining the installation and setting the configurations of a Carlink CLBTLR system, we strongly recommend downloading the Application from the App store and create a user account.

a. Go to the App store (Apple) or Play store (Android) and Search for "Carlink CLBTLR". Download and install the Free Application.
b. Launch the newly installed SmartControl Application on your smartphone or tablet
c. Click "Create an Account"
d. Fill in all the required fields
e. Once done, Log into the Application using your email and your newly created password.

XTX-3000

RTX-3200

IVU-CAB-4W

HRN-CRF-02

CAR:LINK™
INSTALLATION, WIRING & PROGRAMMING GUIDE
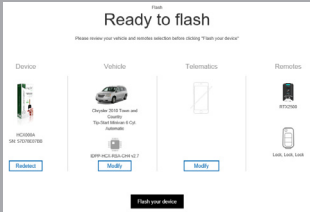
PARTS REQUIRED FOR INSTALLATION OF : iDATASTART HCx

XTX-3000	IVU-CAB-4W	iDatastart HCx	

STEP 1. CONFIGURE THE REMOTE STARTER

The ADS Weblink (ADS-USB) is required to properly configure the iDatastart HCx remote starter to accept the RF kit system. When flashing the iDatastart HCx remote starter, **please follow this procedure in order to configure correctly your remote starter.**

a. Go to **www.idatalink.com** and click on "Flash your module"	FLASH YOUR MODULE
b. Using the new Weblink configurator, Choose vehicle Make, Year, Model, Trim.	Select Make
c. In the Remote Configuration section, Select the Brand drop-down and Choose "CONNECTED" and select the Connected RF system you are using.	Remotes Configuration
d. This will load a firmware starting with:	**"IDPP-XX(XX)-XXX (X.X)"**
e. Click "Flash your device"	Ready to flash

CAR:LINK™ INSTALLATION, WIRING & PROGRAMMING GUIDE

STEP 2. CONNECT

Installation:
Place antenna 3 inches
(minimum) from any obstructions

Orientation: Vertical; antenna
facing downwards (as seen in
diagram)

Antenna: Cord length 9 feet

STEP 3. ADD A DEVICE/VEHICLE TO AN ACCOUNT

a. Download the App and Log into your account (see page 2 of this document for details)

b. Click the "+" sign at the bottom right of the Application screen. This will allow you to temporarily add and configure your customers system inside your personal account. A system refers to the Antenna being installed in the windsheild of the vehicle.

c. Before adding a system to your device, ensure the remote starter **IS NOT armed/locked or in Valet mode** and set the ignition of the vehicle to the On position.

d. Then Tap to "Scan QR Code" and use the smartphone camera to scan the QR Code located on top of the antenna.

e. Once connected, the system is in "Installer Mode". Follow the on-screen instructions for configuring the system.

STEP 4. PRE-CONFIGURE THE APPLICATION EXPERIENCE FOR YOUR CUSTOMER

a. Start by setting the protocol of the antenna being used. This is acheived by selecting the Brand, Model and protocol used inside the Remote starter. When done, click on "Confirm". System will now try to communicate with the remote starter to confirm that all settings related to protocol are valid.

b. Once back in the control panel, click on the Settings Gear at the top right of the screen and edit the Vehicle name, configure the Auxiliaries that might have been added (if applicable) and click "OK" when done. Then choose the vehicle to display inside the control panel in the VEHICLE IMAGE section and click OK.

c. When your configurations are all completed, click "OK" at the top right corner. All Configurations will take effect.

STEP 5. TESTING THE SYSTEM

When the system is connected and fully configured, testing can begin. Test all the application functions (Start, Stop, Lock, Unlock, Auxiliaries, Etc.) When testing is completed, tap on the "installer icon" at the top of control screen. When prompted Click "Yes, and delete system from account" since this is the installer mode and not the End User mode. This will make the system "Ready for Customer Delivery".

Also make sure that the Owners Card is handed to the Owner of the vehicle or attached to the vehicle keychain. Doing this will ensure that the instructions on how to setup their App, Account and add the System is done correctly by using the system QR Code affixed on the windsheild mounted antenna.

NOTE : UNDER ANY CIRCUMSTANCES, PLEASE DO NOT REMOVE THE QR CODE FROM THE ANTENNA!

CAR:LINK™ INSTALLATION, WIRING & PROGRAMMING GUIDE

PARTS REQUIRED FOR INSTALLATION OF : iDATASTART VWx

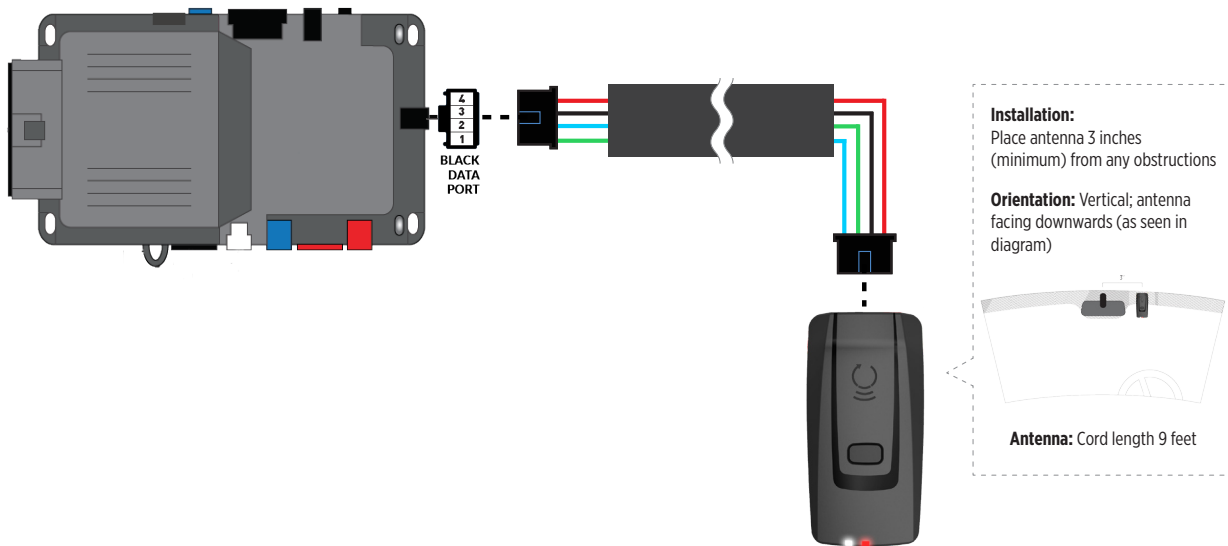| XTX-3000	IVU-CAB-4W	iDatastart VWx	

STEP 1. CONFIGURE THE REMOTE STARTER

The ADS Weblink (ADS-USB) is required to properly configure the iDatastart VWx remote starter to accept the RF kit system. When flashing the iDatastart VWx remote starter, **please follow this procedure in order to configure correctly your remote starter.**

a. Go to **www.idatalink.com** and click on "Flash your module"	**FLASH YOUR MODULE**
b. Using the new Weblink configurator, Choose vehicle Make, Year, Model, Trim.	Select Make
c. In the Remote Configuration section, Select the Brand drop-down and Choose "CONNECTED" and select the Connected RF system you are using.	Remotes Configuration
d. This will load a firmware starting with:	**"IDPP-XX(XX)-XXX (X.X)"**
e. Click "Flash your device"	Ready to flash

CAR:LINK™

STEP 2. CONNECT

BLACK
DATA
PORT

Installation:
Place antenna 3 inches
(minimum) from any obstructions

Orientation: Vertical; antenna
facing downwards (as seen in
diagram)

Antenna: Cord length 9 feet

STEP 3. ADD A DEVICE/VEHICLE TO AN ACCOUNT

a. Download the App and Log into your account (see page 2 of this document for details)

b. Click the "+" sign at the bottom right of the Application screen. This will allow you to temporarily add and configure your customers system inside your personal account. A system refers to the Antenna being installed in the windsheild of the vehicle.

c. Before adding a system to your device, ensure the remote starter IS NOT armed/locked or in Valet mode and set the ignition of the vehicle to the On position.

d. Then Tap to "Scan QR Code" and use the smartphone camera to scan the QR Code located on top of the antenna.

e. Once connected, the system is in "Installer Mode". Follow the on-screen instructions for configuring the system.

STEP 4. PRE-CONFIGURE THE APPLICATION EXPERIENCE FOR YOUR CUSTOMER

a. Start by setting the protocol of the antenna being used. This is acheived by selecting the Brand, Model and protocol used inside the Remote starter. When done, click on "Confirm". System will now try to communicate with the remote starter to confirm that all settings related to protocol are valid.

b. Once back in the control panel, click on the Settings Gear at the top right of the screen and edit the Vehicle name, configure the Auxiliaries that might have been added (if applicable) and click "OK" when done. Then choose the vehicle to display inside the control panel in the VEHICLE IMAGE section and click OK.

c. When your configurations are all completed, click "OK" at the top right corner. All Configurations will take effect.

STEP 5. TESTING THE SYSTEM

When the system is connected and fully configured, testing can begin. Test all the application functions (Start, Stop, Lock, Unlock, Auxiliaries, Etc.) When testing is completed, tap on the "installer icon" at the top of control screen. When prompted Click "Yes, and delete system from account" since this is the installer mode and not the End User mode. This will make the system "Ready for Customer Delivery".

Also make sure that the Owners Card is handed to the Owner of the vehicle or attached to the vehicle keychain. Doing this will ensure that the instructions on how to setup their App, Account and add the System is done correctly by using the system QR Code affixed on the windsheild mounted antenna.
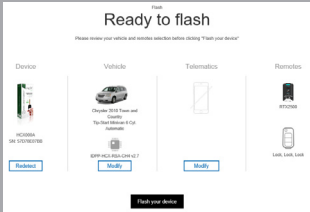
NOTE : UNDER ANY CIRCUMSTANCES, PLEASE DO NOT REMOVE THE QR CODE FROM THE ANTENNA!

CAR:LINK™ INSTALLATION, WIRING & PROGRAMMING GUIDE

PARTS REQUIRED FOR INSTALLATION OF : iDATASTART BM or BZ

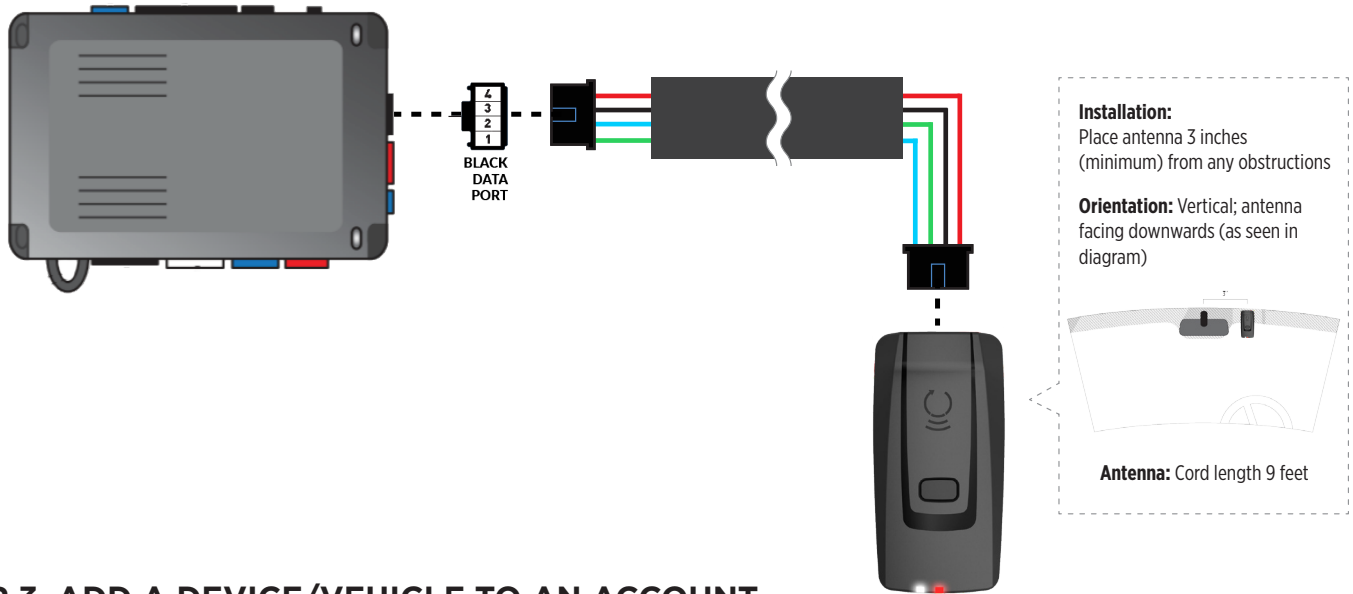| XTX-3000	IVU-CAB-4W	iDatastart BM or BZ	

STEP 1. CONFIGURE THE REMOTE STARTER

The ADS Weblink (ADS-USB) is required to properly configure the iDatastart BM or BZ remote starter to accept the RF kit system. When flashing the iDatastart BM or BZ remote starter, **please follow this procedure in order to configure correctly your remote starter.**

a. Go to **www.idatalink.com** and click on "Flash your module"

b. Choose vehicle Make, Model, Year, Trim

VEHICLE SELECTION
FILTER: Select a make | All Years | All models | All trims | NEXT →

c. Choose "CONNECTED RF KIT & Telematics"

○ CONNECTED RF Kit & MyCar

d. This will load a firmware starting with: **"IDPP-XX(XX)-XXX (X.X)"**

e. Click "Flash!"

FLASH→

STEP 2. CONNECT

BLACK DATA PORT

Installation: Place antenna 3 inches (minimum) from any obstructions

Orientation: Vertical; antenna facing downwards (as seen in diagram)

Antenna: Cord length 9 feet

STEP 3. ADD A DEVICE/VEHICLE TO AN ACCOUNT

a. Download the App and Log into your account (see page 2 of this document for details)

b. Click the "+" sign at the bottom right of the Application screen. This will allow you to temporarily add and configure your customers system inside your personal account. A system refers to the Antenna being installed in the windsheild of the vehicle.

c. Before adding a system to your device, ensure the remote starter IS NOT armed/locked or in Valet mode and set the ignition of the vehicle to the On position.

d. Then Tap to "Scan QR Code" and use the smartphone camera to scan the QR Code located on top of the antenna.

e. Once connected, the system is in "Installer Mode". Follow the on-screen instructions for configuring the system.

STEP 4. PRE-CONFIGURE THE APPLICATION EXPERIENCE FOR YOUR CUSTOMER

a. Start by setting the protocol of the antenna being used. This is acheived by selecting the Brand, Model and protocol used inside the Remote starter. When done, click on "Confirm". System will now try to communicate with the remote starter to confirm that all settings related to protocol are valid.

b. Once back in the control panel, click on the Settings Gear at the top right of the screen and edit the Vehicle name, configure the Auxiliaries that might have been added (if applicable) and click "OK" when done. Then choose the vehicle to display inside the control panel in the VEHICLE IMAGE section and click OK.

c. When your configurations are all completed, click "OK" at the top right corner. All Configurations will take effect.

STEP 5. TESTING THE SYSTEM

When the system is connected and fully configured, testing can begin. Test all the application functions (Start, Stop, Lock, Unlock, Auxiliaries, Etc.) When testing is completed, tap on the "installer icon" at the top of control screen. When prompted Click "Yes, and delete system from account" since this is the installer mode and not the End User mode. This will make the system "Ready for Customer Delivery".

Also make sure that the Owners Card is handed to the Owner of the vehicle or attached to the vehicle keychain. Doing this will ensure that the instructions on how to setup their App, Account and add the System is done correctly by using the system QR Code affixed on the windsheild mounted antenna.

NOTE : UNDER ANY CIRCUMSTANCES, PLEASE DO NOT REMOVE THE QR CODE FROM THE ANTENNA!

CAR:LINK™ INSTALLATION, WIRING & PROGRAMMING GUIDE

PARTS REQUIRED FOR INSTALLATION OF : AKX or OEM

XTX-3000	IVU-CAB-4W	AKX or OEM	

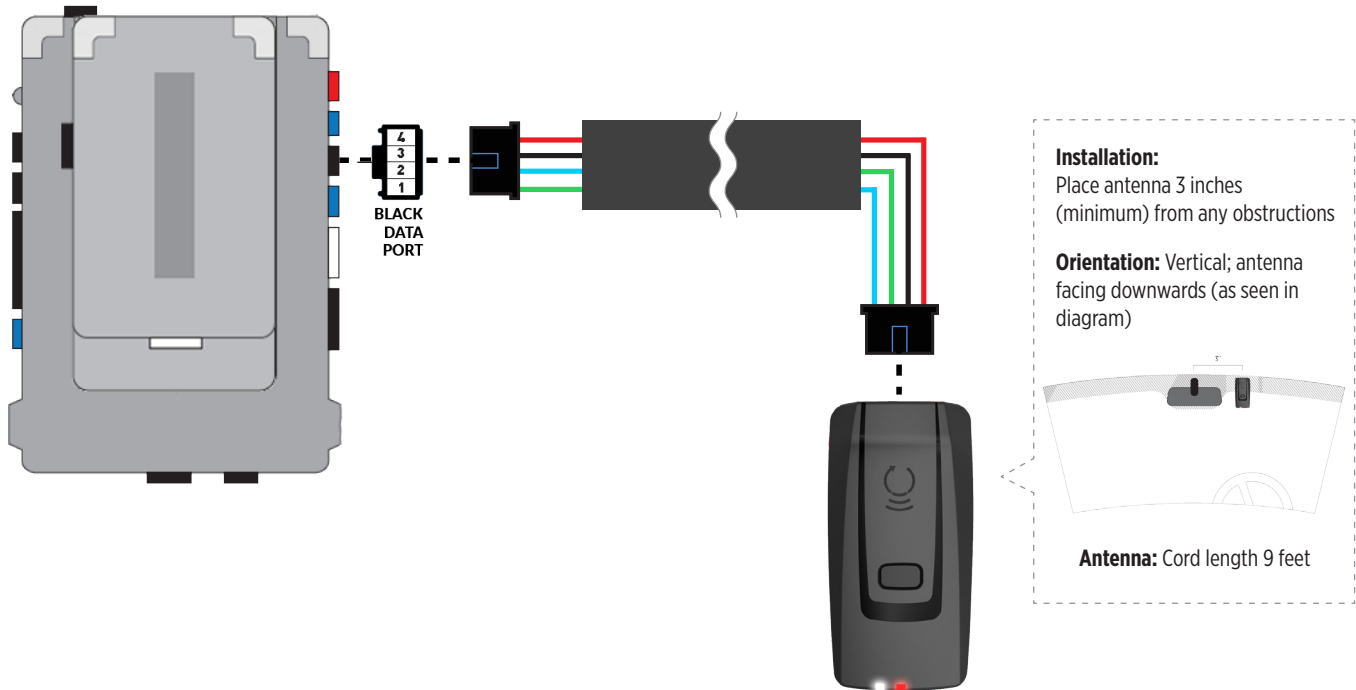## STEP 1. CONFIGURE THE REMOTE STARTER

The ADS Weblink (ADS-USB) is required to properly configure the AKX or OEM remote starter to accept the RF kit system. When flashing the AKX or OEM remote starter, **please follow this procedure in order to configure correctly your remote starter.**

a. Go to **www.idatalink.com** and click on "Flash your module"	**FLASH YOUR MODULE**
b. Choose vehicle Make, Model, Year, Trim	VEHICLE SELECTION FILTER: [Select a make ▼] [All Years ▼] [All models ▼] [All trims ▼] NEXT→
c. Choose "CONNECTED RF KIT & Telematics"	○ CONNECTED RF Kit & MyCar
d. This will load a firmware starting with:	**"IDPP-XX(XX)-XXX (X.X)"**
e. Click "Flash!"	**FLASH→**

CAR:LINK™ INSTALLATION, WIRING & PROGRAMMING GUIDE

STEP 2. CONNECT

4 3 2 1

BLACK
DATA
PORT

Installation:
Place antenna 3 inches
(minimum) from any obstructions

Orientation: Vertical; antenna
facing downwards (as seen in
diagram)

Antenna: Cord length 9 feet

STEP 3. ADD A DEVICE/VEHICLE TO AN ACCOUNT

a. Download the App and Log into your account (see page 2 of this document for details)

b. Click the "+" sign at the bottom right of the Application screen. This will allow you to temporarily add and configure your customers system inside your personal account. A system refers to the Antenna being installed in the windsheild of the vehicle.

c. Before adding a system to your device, ensure the remote starter IS NOT armed/locked or in Valet mode and set the ignition of the vehicle to the On position.

d. Then Tap to "Scan QR Code" and use the smartphone camera to scan the QR Code located on top of the antenna.

e. Once connected, the system is in "Installer Mode". Follow the on-screen instructions for configuring the system.

STEP 4. PRE-CONFIGURE THE APPLICATION EXPERIENCE FOR YOUR CUSTOMER

a. Start by setting the protocol of the antenna being used. This is acheived by selecting the Brand, Model and protocol used inside the Remote starter. When done, click on "Confirm". System will now try to communicate with the remote starter to confirm that all settings related to protocol are valid.

b. Once back in the control panel, click on the Settings Gear at the top right of the screen and edit the Vehicle name, configure the Auxiliaries that might have been added (if applicable) and click "OK" when done. Then choose the vehicle to display inside the control panel in the VEHICLE IMAGE section and click OK.

c. When your configurations are all completed, click "OK" at the top right corner. All Configurations will take effect.

STEP 5. TESTING THE SYSTEM

When the system is connected and fully configured, testing can begin. Test all the application functions (Start, Stop, Lock, Unlock, Auxiliaries, Etc.) When testing is completed, tap on the "installer icon" at the top of control screen. When prompted Click "Yes, and delete system from account" since this is the installer mode and not the End User mode. This will make the system "Ready for Customer Delivery".

Also make sure that the Owners Card is handed to the Owner of the vehicle or attached to the vehicle keychain. Doing this will ensure that the instructions on how to setup their App, Account and add the System is done correctly by using the system QR Code affixed on the windsheild mounted antenna.

NOTE : UNDER ANY CIRCUMSTANCES, PLEASE DO NOT REMOVE THE QR CODE FROM THE ANTENNA!

CAR:LINK™ INSTALLATION, WIRING & PROGRAMMING GUIDE

PARTS REQUIRED FOR INSTALLATION OF : ADS-AL-CA / OL-MDB-ALL

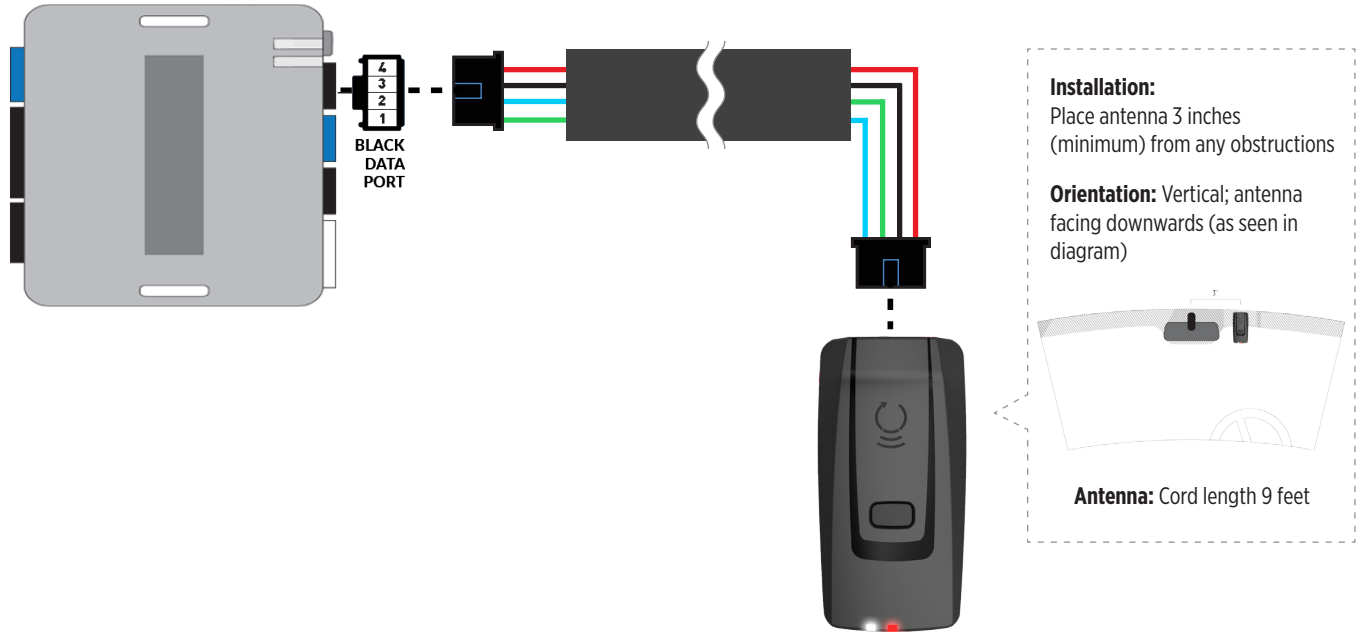| XTX-3000	IVU-CAB-4W	ADS-AL-CA / OL-MDB-ALL	HRN-CRF-02

STEP 1. CONFIGURE THE REMOTE STARTER

The ADS Weblink (ADS-USB) is required to properly configure the ADS-AL-CA remote starter to accept the RF kit system. When flashing the ADS-AL-CA remote starter, **please follow this procedure in order to configure correctly your remote starter.**

a. Go to www.idatalink.com and click on "Flash your module"	FLASH YOUR MODULE
b. Choose vehicle Make, Model, Year, Trim	VEHICLE SELECTION FILTER: Select a make / All Years / All models / All trims NEXT→
c. Choose "CONNECTED SmartControl"	○ CONNECTED SmartControl
d. This will load a firmware starting with:	**"RFP-XX(XX)-XXX (X.X)"**
e. Click "Flash!"	**FLASH→**

STEP 2. CONNECT

Installation:
Place antenna 3 inches (minimum) from any obstructions

Orientation: Vertical; antenna facing downwards (as seen in diagram)

Antenna: Cord length 9 feet

(1) Connect when using with ADS-AL-CA.

STEP 3. ADD A DEVICE/VEHICLE TO AN ACCOUNT

a. Download the App and Log into your account (see page 2 of this document for details)

b. Click the "+" sign at the bottom right of the Application screen. This will allow you to temporarily add and configure your customers system inside your personal account. A system refers to the Antenna being installed in the windsheild of the vehicle.

c. Before adding a system to your device, ensure the remote starter IS NOT armed/locked or in Valet mode and set the ignition of the vehicle to the On position.

d. Then Tap to "Scan QR Code" and use the smartphone camera to scan the QR Code located on top of the antenna.

e. Once connected, the system is in "Installer Mode". Follow the on-screen instructions for configuring the system.

STEP 4. PRE-CONFIGURE THE APPLICATION EXPERIENCE FOR YOUR CUSTOMER

a. Start by setting the protocol of the antenna being used. This is acheived by selecting the Brand, Model and protocol used inside the Remote starter. When done, click on "Confirm". System will now try to communicate with the remote starter to confirm that all settings related to protocol are valid.

b. Once back in the control panel, click on the Settings Gear at the top right of the screen and edit the Vehicle name, configure the Auxiliaries that might have been added (if applicable) and click "OK" when done. Then choose the vehicle to display inside the control panel in the VEHICLE IMAGE section and click OK.

c. When your configurations are all completed, click "OK" at the top right corner. All Configurations will take effect.

STEP 5. TESTING THE SYSTEM

When the system is connected and fully configured, testing can begin. Test all the application functions (Start, Stop, Lock, Unlock, Auxiliaries, Etc.) When testing is completed, tap on the "installer icon" at the top of control screen. When prompted Click "Yes, and delete system from account" since this is the installer mode and not the End User mode. This will make the system "Ready for Customer Delivery".

Also make sure that the Owners Card is handed to the Owner of the vehicle or attached to the vehicle keychain. Doing this will ensure that the instructions on how to setup their App, Account and add the System is done correctly by using the system QR Code affixed on the windsheild mounted antenna.

NOTE : UNDER ANY CIRCUMSTANCES, PLEASE DO NOT REMOVE THE QR CODE FROM THE ANTENNA!

CAR:LINK™ INSTALLATION, WIRING & PROGRAMMING GUIDE

PARTS REQUIRED FOR INSTALLATION OF : FLASHLOGIC FL-CAN

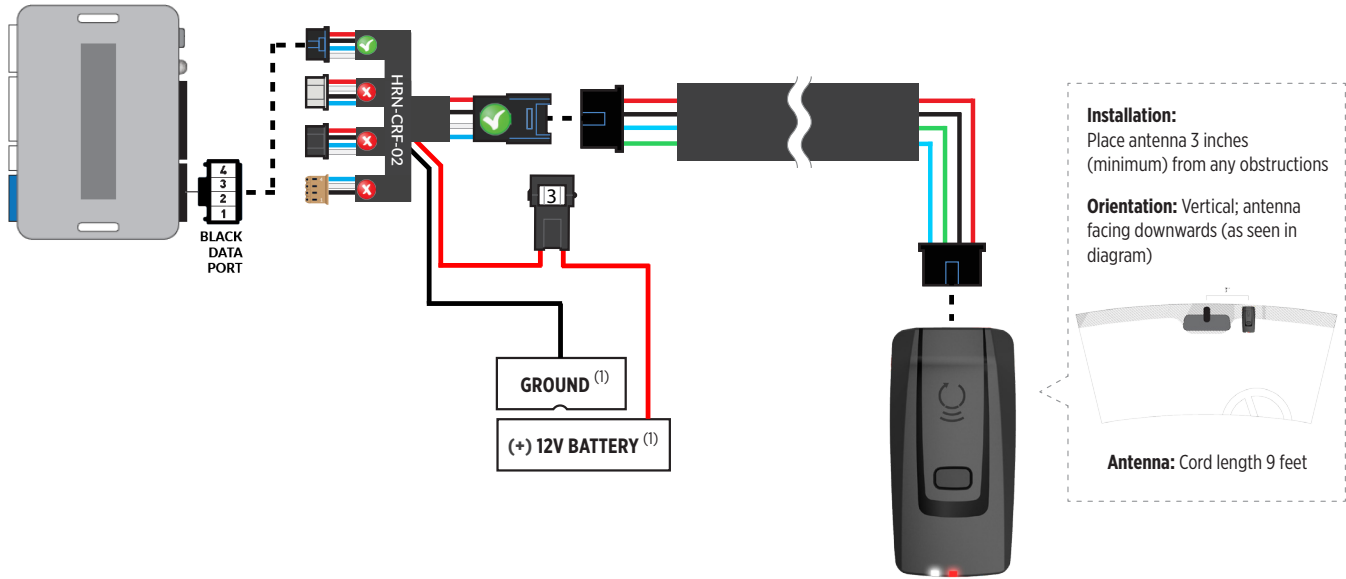| XTX-3000	IVU-CAB-4W	Flashlogic FL-CAN	HRN-CRF-02

STEP 1. CONFIGURE THE REMOTE STARTER

The ADS Weblink (ADS-USB) is required to properly configure the Flashlogic FL-CAN remote starter to accept the RF kit system. When flashing the Flashlogic FL-CAN remote starter, **please follow this procedure in order to configure correctly your remote starter.**

a. Go to **www.flashlogic.com** and click on "Flash your module" **FLASH YOUR MODULE**

b. Choose vehicle Make, Model, Year, Trim

VEHICLE SELECTION
FILTER: [Select a make ▾] [All Years ▾] [All models ▾] [All trims ▾]   NEXT →

c. Choose "ASCLBTLR"

○ VOXX Carlink ASCLBTLR (iDatalink)

d. This will load a firmware starting with: **"CFLI-XX(XX)-XXX (X.X)"**

e. Click "Flash!" **FLASH→**

CAR:LINK™ INSTALLATION, WIRING & PROGRAMMING GUIDE

STEP 2. CONNECT

Installation:
Place antenna 3 inches (minimum) from any obstructions

Orientation: Vertical; antenna facing downwards (as seen in diagram)

Antenna: Cord length 9 feet

HRN-CRF-02

BLACK DATA PORT

GROUND (1)

(+) 12V BATTERY (1)

(1) Connect when using with FL-CAN.

STEP 3. ADD A DEVICE/VEHICLE TO AN ACCOUNT

a. Download the App and Log into your account (see page 2 of this document for details)

b. Click the "+" sign at the bottom right of the Application screen. This will allow you to temporarily add and configure your customers system inside your personal account. A system refers to the Antenna   being installed in the windsheild of the vehicle.

c. Before adding a system to your device, ensure the remote starter IS NOT armed/locked or in Valet mode and set the ignition of the vehicle to the On position.

d. Then Tap to "Scan QR Code" and use the smartphone camera to scan the QR Code located on top of the antenna.

e. Once connected, the system is in "Installer Mode". Follow the on-screen instructions for configuring the system.

STEP 4. PRE-CONFIGURE THE APPLICATION EXPERIENCE FOR YOUR CUSTOMER

a. Start by setting the protocol of the antenna being used. This is acheived by selecting the Brand, Model and protocol used inside the Remote starter. When done, click on "Confirm". System will now try to communicate with the remote starter to confirm that all settings related to protocol are valid.

b. Once back in the control panel, click on the Settings Gear at the top right of the screen and edit the Vehicle name, configure the Auxiliaries that might have been added (if applicable) and click "OK" when done. Then choose the vehicle to display inside the control panel in the VEHICLE IMAGE section and click OK.

c. When your configurations are all completed, click "OK" at the top right corner. All Configurations will take effect.

STEP 5. TESTING THE SYSTEM

When the system is connected and fully configured, testing can begin. Test all the application functions (Start, Stop, Lock, Unlock, Auxiliaries, Etc.) When testing is completed, tap on the "installer icon" at the top of control screen. When prompted Click "Yes, and delete system from account" since this is the installer mode and not the End User mode. This will make the system "Ready for Customer Delivery".

Also make sure that the Owners Card is handed to the Owner of the vehicle or attached to the vehicle keychain. Doing this will ensure that the instructions on how to setup their App, Account and add the System is done correctly by using the system QR Code affixed on the windsheild mounted antenna.

NOTE : UNDER ANY CIRCUMSTANCES, PLEASE DO NOT REMOVE THE QR CODE FROM THE ANTENNA!

CAR:LINK™ INSTALLATION, WIRING & PROGRAMMING GUIDE

PARTS REQUIRED FOR INSTALLATION OF : FLASHLOGIC FL-CAN

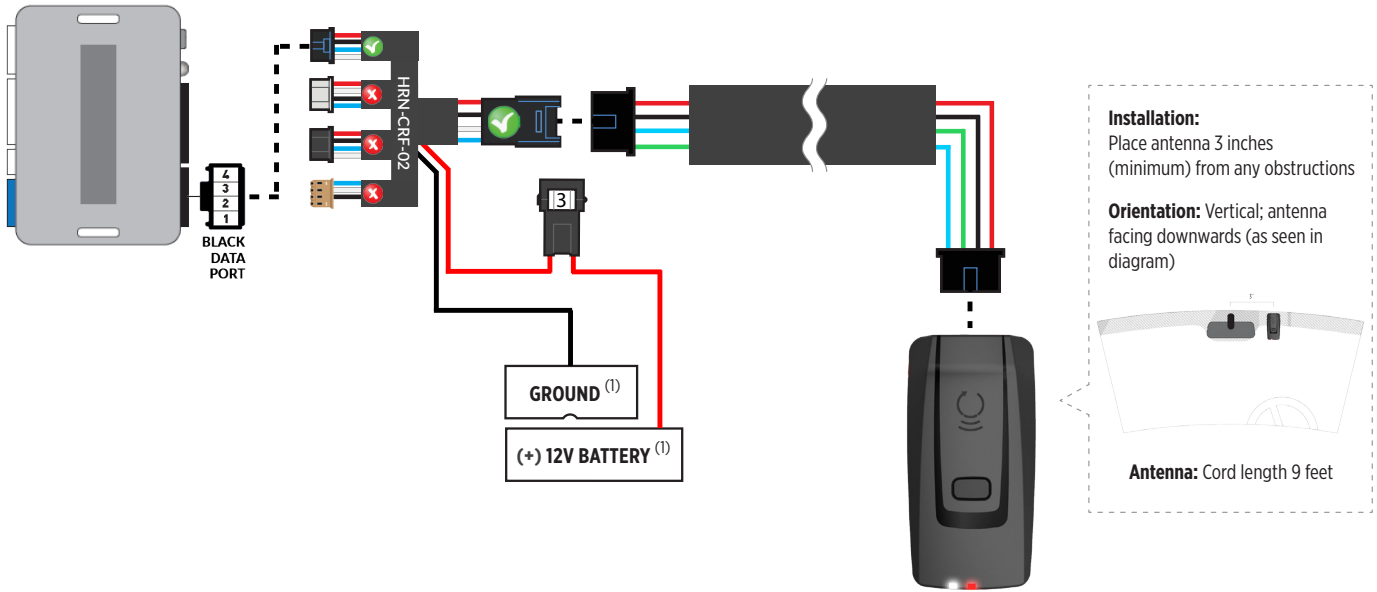| XTX-3000	IVU-CAB-4W	Flashlogic FL-CAN	HRN-CRF-02

STEP 1. CONFIGURE THE REMOTE STARTER

The ADS Weblink (ADS-USB) is required to properly configure the Flashlogic FL-CAN remote starter to accept the RF kit system. When flashing the Flashlogic FL-CAN remote starter, **please follow this procedure in order to configure correctly your remote starter.**

a. Go to **www.flashlogic.com** and click on "Flash your module"   **FLASH YOUR MODULE**

b. Choose vehicle Make, Model, Year, Trim

VEHICLE SELECTION

FILTER: Select a make | All Years | All models | All trims   NEXT →

c. Choose "ASCLBTLR"

VOXX Cartlink ASCLBTLR (iDatalink)

d. This will load a firmware starting with: **"CFLI-XX(XX)-XXX (X.X)"**

e. Click "Flash!"   **FLASH→**

CAR:LINK™ INSTALLATION, WIRING & PROGRAMMING GUIDE

STEP 2. CONNECT

Installation:
Place antenna 3 inches (minimum) from any obstructions

Orientation: Vertical; antenna facing downwards (as seen in diagram)

Antenna: Cord length 9 feet

BLACK DATA PORT

HRN-CRF-02

GROUND (1)

(+) 12V BATTERY (1)

(1) Connect when using with FL-CAN.

STEP 3. ADD A DEVICE/VEHICLE TO AN ACCOUNT

a. Download the App and Log into your account (see page 2 of this document for details)

b. Click the "+" sign at the bottom right of the Application screen. This will allow you to temporarily add and configure your customers system inside your personal account. A system refers to the Antenna being installed in the windsheild of the vehicle.

c. Before adding a system to your device, ensure the remote starter IS NOT armed/locked or in Valet mode and set the ignition of the vehicle to the On position.

d. Then Tap to "Scan QR Code" and use the smartphone camera to scan the QR Code located on top of the antenna.

e. Once connected, the system is in "Installer Mode". Follow the on-screen instructions for configuring the system.

STEP 4. PRE-CONFIGURE THE APPLICATION EXPERIENCE FOR YOUR CUSTOMER

a. Start by setting the protocol of the antenna being used. This is acheived by selecting the Brand, Model and protocol used inside the Remote starter. When done, click on "Confirm". System will now try to communicate with the remote starter to confirm that all settings related to protocol are valid.

b. Once back in the control panel, click on the Settings Gear at the top right of the screen and edit the Vehicle name, configure the Auxiliaries that might have been added (if applicable) and click "OK" when done. Then choose the vehicle to display inside the control panel in the VEHICLE IMAGE section and click OK.

c. When your configurations are all completed, click "OK" at the top right corner. All Configurations will take effect.

STEP 5. TESTING THE SYSTEM

When the system is connected and fully configured, testing can begin. Test all the application functions (Start, Stop, Lock, Unlock, Auxiliaries, Etc.) When testing is completed, tap on the "installer icon" at the top of control screen. When prompted Click "Yes, and delete system from account" since this is the installer mode and not the End User mode. This will make the system "Ready for Customer Delivery".

Also make sure that the Owners Card is handed to the Owner of the vehicle or attached to the vehicle keychain. Doing this will ensure that the instructions on how to setup their App, Account and add the System is done correctly by using the system QR Code affixed on the windsheild mounted antenna.

NOTE : UNDER ANY CIRCUMSTANCES, PLEASE DO NOT REMOVE THE QR CODE FROM THE ANTENNA!

CAR:LINK™ INSTALLATION, WIRING & PROGRAMMING GUIDE

PARTS REQUIRED FOR INSTALLATION OF : FLASHLOGIC FLRS

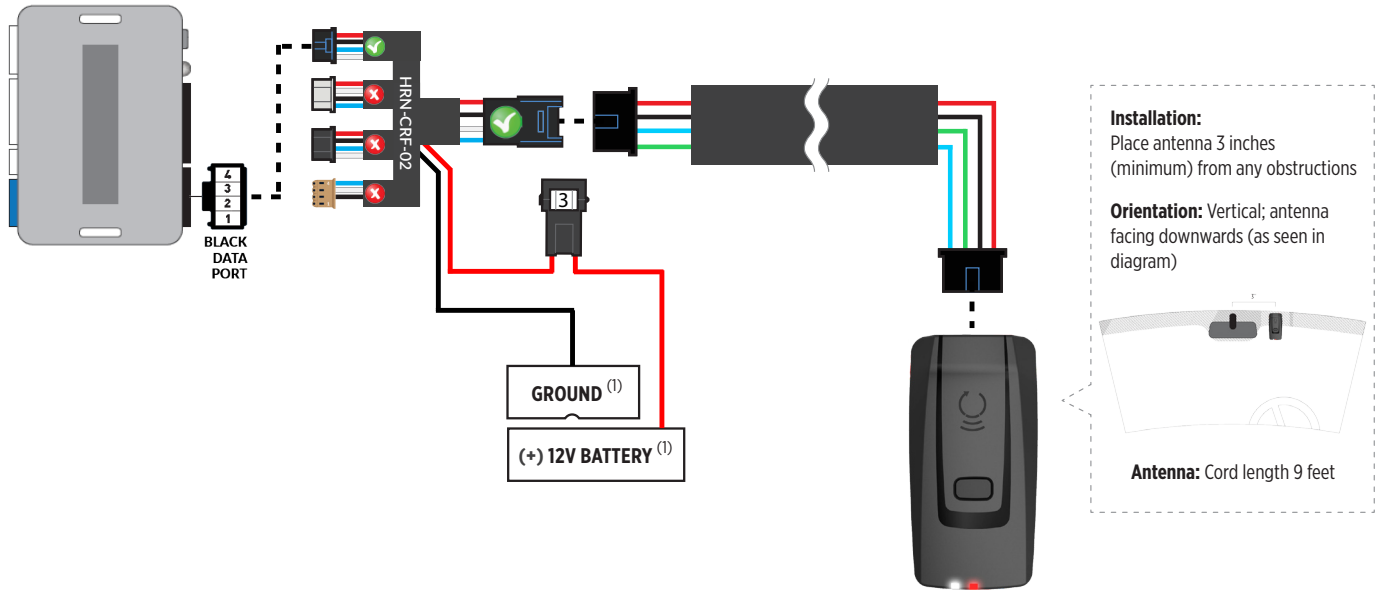| XTX-3000	IVU-CAB-4W	Flashlogic FLRS	

STEP 1. CONFIGURE THE REMOTE STARTER

The ADS Weblink (ADS-USB) is required to properly configure the Flashlogic FLRS remote starter to accept the RF kit system. When flashing the Flashlogic FLRS remote starter, **please follow this procedure in order to configure correctly your remote starter.**

a. Go to **www.flashlogic.com** and click on "Flash your module"	**FLASH YOUR MODULE**
b. Choose vehicle Make, Model, Year, Trim	VEHICLE SELECTION FILTER: Select a make / All Years / All models / All trims NEXT→
c. Choose "ASCLBTLR"	⊙ VOXX Carlink ASCLBTLR (iDatalink)
d. This will load a firmware starting with:	**"CFLI-XX(XX)-XXX (X.X)"**
e. Click "Flash!"	**FLASH→**

CAR:LINK™ INSTALLATION, WIRING & PROGRAMMING GUIDE

STEP 2. CONNECT

BLUE TELEMATICS PORT

4
3
2
1

Installation:
Place antenna 3 inches (minimum) from any obstructions

Orientation: Vertical; antenna facing downwards (as seen in diagram)

Antenna: Cord length 9 feet

STEP 3. ADD A DEVICE/VEHICLE TO AN ACCOUNT

a. Download the App and Log into your account (see page 2 of this document for details)

b. Click the "+" sign at the bottom right of the Application screen. This will allow you to temporarily add and configure your customers system inside your personal account. A system refers to the Antenna being installed in the windsheild of the vehicle.

c. Before adding a system to your device, ensure the remote starter IS NOT armed/locked or in Valet mode and set the ignition of the vehicle to the On position.

d. Then Tap to "Scan QR Code" and use the smartphone camera to scan the QR Code located on top of the antenna.

e. Once connected, the system is in "Installer Mode". Follow the on-screen instructions for configuring the system.

STEP 4. PRE-CONFIGURE THE APPLICATION EXPERIENCE FOR YOUR CUSTOMER

a. Start by setting the protocol of the antenna being used. This is acheived by selecting the Brand, Model and protocol used inside the Remote starter. When done, click on "Confirm". System will now try to communicate with the remote starter to confirm that all settings related to protocol are valid.

b. Once back in the control panel, click on the Settings Gear at the top right of the screen and edit the Vehicle name, configure the Auxiliaries that might have been added (if applicable) and click "OK" when done. Then choose the vehicle to display inside the control panel in the VEHICLE IMAGE section and click OK.

c. When your configurations are all completed, click "OK" at the top right corner. All Configurations will take effect.

STEP 5. TESTING THE SYSTEM

When the system is connected and fully configured, testing can begin. Test all the application functions (Start, Stop, Lock, Unlock, Auxiliaries, Etc.) When testing is completed, tap on the "installer icon" at the top of control screen. When prompted Click "Yes, and delete system from account" since this is the installer mode and not the End User mode. This will make the system "Ready for Customer Delivery".

Also make sure that the Owners Card is handed to the Owner of the vehicle or attached to the vehicle keychain. Doing this will ensure that the instructions on how to setup their App, Account and add the System is done correctly by using the system QR Code affixed on the windsheild mounted antenna.

NOTE : UNDER ANY CIRCUMSTANCES, PLEASE DO NOT REMOVE THE QR CODE FROM THE ANTENNA!

CAR:LINK™ INSTALLATION, WIRING & PROGRAMMING GUIDE

PARTS REQUIRED FOR INSTALLATION OF : FLASHLOGIC FLRSBA

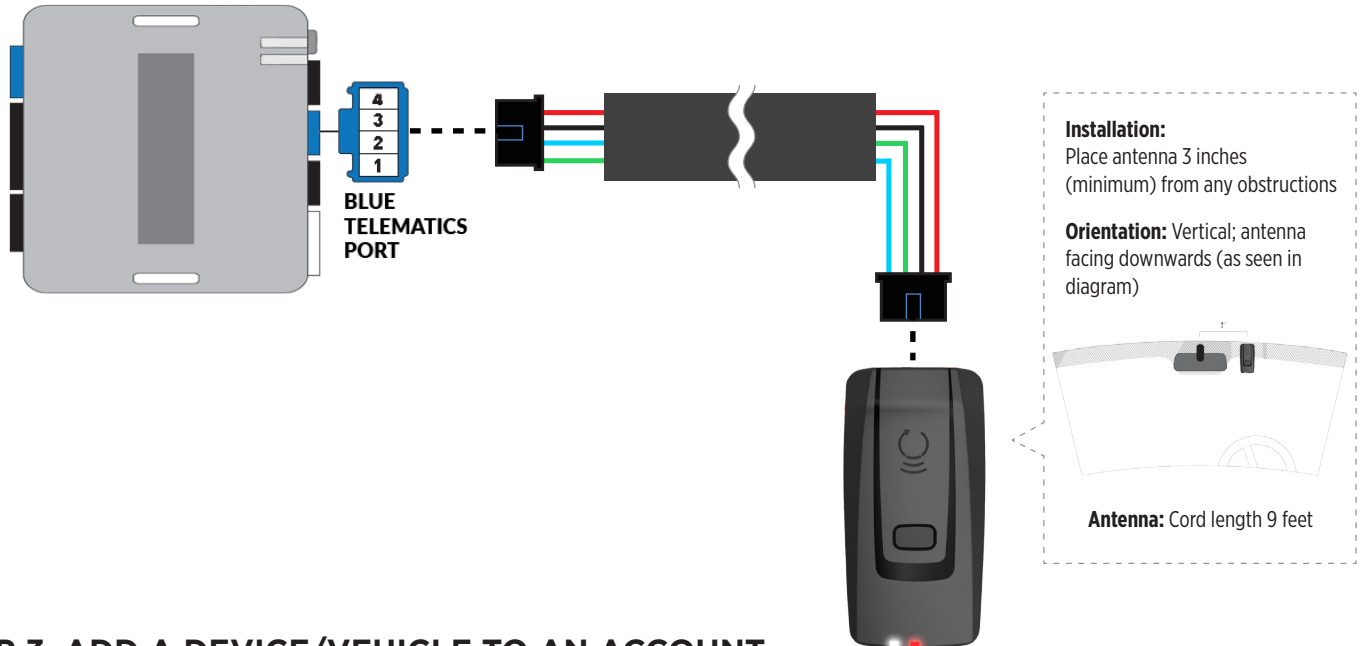| XTX-3000	IVU-CAB-4W	Flashlogic FLRSBA	

STEP 1. CONFIGURE THE REMOTE STARTER

The ADS Weblink (ADS-USB) is required to properly configure the Flashlogic FLRSBA remote starter to accept the RF kit system. When flashing the Flashlogic FLRSBA remote starter, **please follow this procedure in order to configure correctly your remote starter.**

a. Go to **www.flashlogic.com** and click on "Flash your module"	**FLASH YOUR MODULE**
b. Using the new Weblink configurator, Choose vehicle Make, Year, Model, Trim.	
c. In the Remote Configuration section, Select the Brand drop-down and Choose "Code Alarm, Prestige or Pursuit".	
d. This will load a firmware starting with:	**"ICO-BA-XXX-XXX"** or **"IVO-BA-XXX-XXX"**
e. Click "Flash your device"	

STEP 2. CONNECT

Installation:
Place antenna 3 inches (minimum) from any obstructions

Orientation: Vertical; antenna facing downwards (as seen in diagram)

Antenna: Cord length 9 feet

BLUE TELEMATICS PORT

STEP 3. ADD A DEVICE/VEHICLE TO AN ACCOUNT

a. Download the App and Log into your account (see page 2 of this document for details)

b. Click the "+" sign at the bottom right of the Application screen. This will allow you to temporarily add and configure your customers system inside your personal account. A system refers to the Antenna being installed in the windsheild of the vehicle.

c. Before adding a system to your device, ensure the remote starter **IS NOT armed/locked or in Valet mode** and set the ignition of the vehicle to the On position.

d. Then Tap to "Scan QR Code" and use the smartphone camera to scan the QR Code located on top of the antenna.

e. Once connected, the system is in "Installer Mode". Follow the on-screen instructions for configuring the system.

STEP 4. PRE-CONFIGURE THE APPLICATION EXPERIENCE FOR YOUR CUSTOMER

a. Start by setting the protocol of the antenna being used. This is acheived by selecting the Brand, Model and protocol used inside the Remote starter. When done, click on "Confirm". System will now try to communicate with the remote starter to confirm that all settings related to protocol are valid.

b. Once back in the control panel, click on the Settings Gear at the top right of the screen and edit the Vehicle name, configure the Auxiliaries that might have been added (if applicable) and click "OK" when done. Then choose the vehicle to display inside the control panel in the VEHICLE IMAGE section and click OK.

c. When your configurations are all completed, click "OK" at the top right corner. All Configurations will take effect.

STEP 5. TESTING THE SYSTEM

When the system is connected and fully configured, testing can begin. Test all the application functions (Start, Stop, Lock, Unlock, Auxiliaries, Etc.) When testing is completed, tap on the "installer icon" at the top of control screen. When prompted Click "Yes, and delete system from account" since this is the installer mode and not the End User mode. This will make the system "Ready for Customer Delivery".

Also make sure that the Owners Card is handed to the Owner of the vehicle or attached to the vehicle keychain. Doing this will ensure that the instructions on how to setup their App, Account and add the System is done correctly by using the system QR Code affixed on the windsheild mounted antenna.
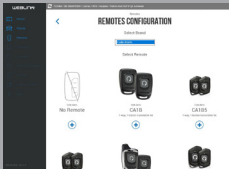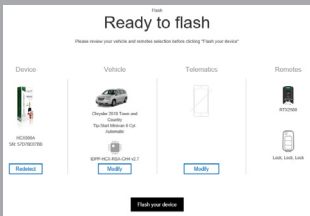
NOTE : UNDER ANY CIRCUMSTANCES, PLEASE DO NOT REMOVE THE QR CODE FROM THE ANTENNA!

CAR:LINK™ INSTALLATION, WIRING & PROGRAMMING GUIDE

PARTS REQUIRED FOR INSTALLATION OF : FLASHLOGIC FLCMVW

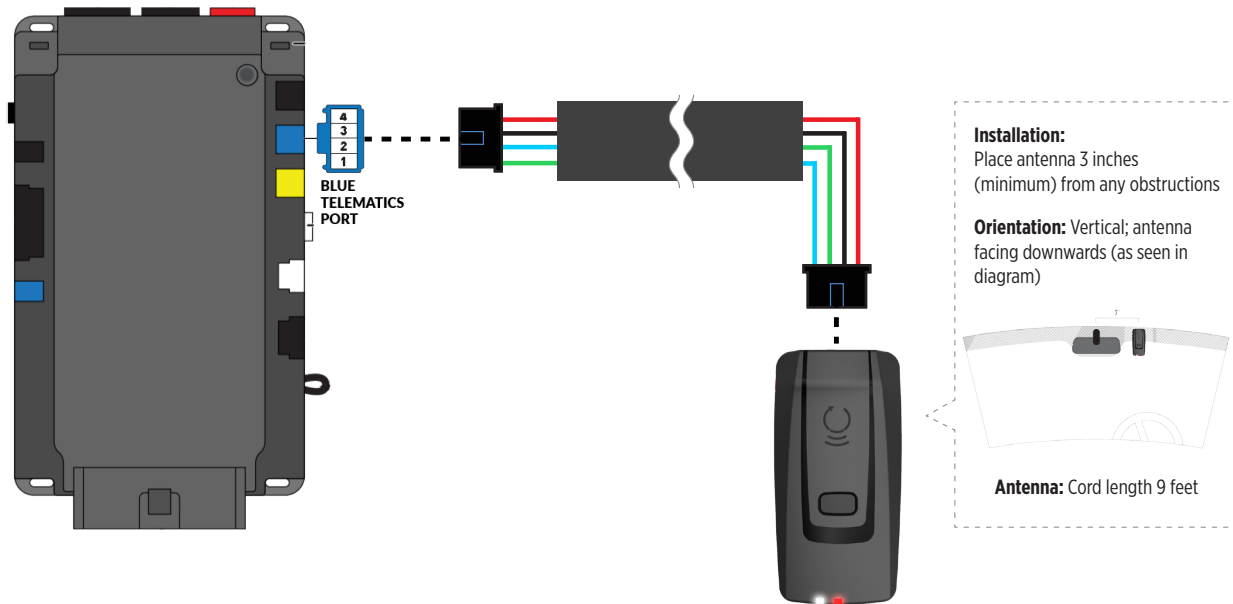| XTX-3000	IVU-CAB-4W	Flashlogic FLCMVW	

STEP 1. CONFIGURE THE REMOTE STARTER

The ADS Weblink (ADS-USB) is required to properly configure the Flashlogic FLCMVW remote starter to accept the RF kit system. When flashing the Flashlogic FLCMVW remote starter, **please follow this procedure in order to configure correctly your remote starter.**

a. Go to **www.flashlogic.com** and click on "Flash your module"		**FLASH YOUR MODULE**
b. Using the new Weblink configurator, Choose vehicle Make, Year, Model, Trim.		
c. In the Remote Configuration section, Select the Brand drop-down and Choose "Code Alarm, Prestige or Pursuit".		
d. This will load a firmware starting with:		**"ICO-BA-XXX-XXX"** **or** **"IVO-BA-XXX-XXX"**
e. Click "Flash your device"		

STEP 2. CONNECT

4 3 2 1

BLUE TELEMATICS PORT

Installation:
Place antenna 3 inches (minimum) from any obstructions

Orientation: Vertical; antenna facing downwards (as seen in diagram)

Antenna: Cord length 9 feet

STEP 3. ADD A DEVICE/VEHICLE TO AN ACCOUNT

a. Download the App and Log into your account (see page 2 of this document for details)

b. Click the "+" sign at the bottom right of the Application screen. This will allow you to temporarily add and configure your customers system inside your personal account. A system refers to the Antenna being installed in the windsheild of the vehicle.

c. Before adding a system to your device, ensure the remote starter **IS NOT armed/locked or in Valet mode** and set the ignition of the vehicle to the On position.

d. Then Tap to "Scan QR Code" and use the smartphone camera to scan the QR Code located on top of the antenna.

e. Once connected, the system is in "Installer Mode". Follow the on-screen instructions for configuring the system.

STEP 4. PRE-CONFIGURE THE APPLICATION EXPERIENCE FOR YOUR CUSTOMER

a. Start by setting the protocol of the antenna being used. This is acheived by selecting the Brand, Model and protocol used inside the Remote starter. When done, click on "Confirm". System will now try to communicate with the remote starter to confirm that all settings related to protocol are valid.

b. Once back in the control panel, click on the Settings Gear at the top right of the screen and edit the Vehicle name, configure the Auxiliaries that might have been added (if applicable) and click "OK" when done. Then choose the vehicle to display inside the control panel in the VEHICLE IMAGE section and click OK.

c. When your configurations are all completed, click "OK" at the top right corner. All Configurations will take effect.

STEP 5. TESTING THE SYSTEM

When the system is connected and fully configured, testing can begin. Test all the application functions (Start, Stop, Lock, Unlock, Auxiliaries, Etc.) When testing is completed, tap on the "installer icon" at the top of control screen. When prompted Click "Yes, and delete system from account" since this is the installer mode and not the End User mode. This will make the system "Ready for Customer Delivery".

Also make sure that the Owners Card is handed to the Owner of the vehicle or attached to the vehicle keychain. Doing this will ensure that the instructions on how to setup their App, Account and add the System is done correctly by using the system QR Code affixed on the windsheild mounted antenna.
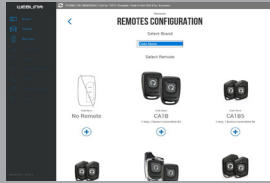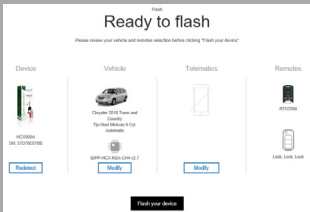
NOTE : UNDER ANY CIRCUMSTANCES, PLEASE DO NOT REMOVE THE QR CODE FROM THE ANTENNA!

CAR:LINK™ INSTALLATION, WIRING & PROGRAMMING GUIDE

PARTS REQUIRED FOR INSTALLATION OF : COMPUSTAR CM7000 / CM7200 / POLARSTART PRS-16

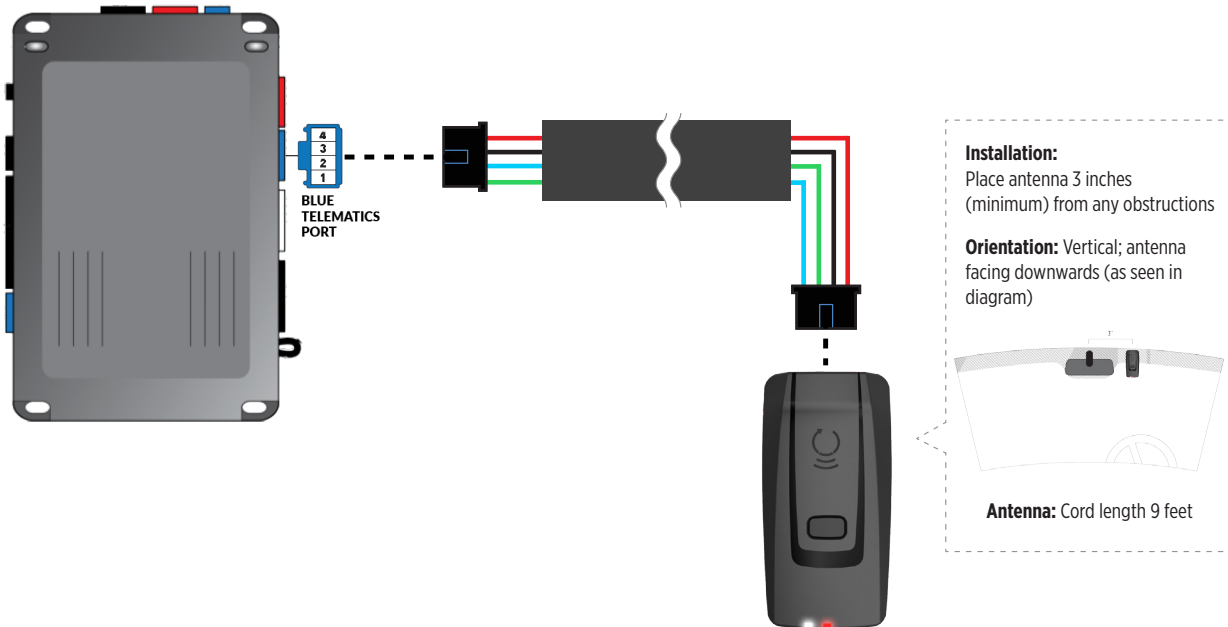| XTX-3000	IVU-CAB-4W	CM7000 / CM7200 / PRS-16	BLADE-AL (64)

STEP 1. CONFIGURE THE REMOTE STARTER

The ADS Weblink (ADS-USB) is required to properly configure the Compustar or Polarstart remote starter to accept the RF kit system. When flashing the Compustar or Polarstart remote starter, **please follow this procedure in order to configure correctly your remote starter.**

a. Go to **www.idatalink.com** and click on "Flash your module" **FLASH YOUR MODULE ▶**

b. Under the ADS-BLADE AL tab, Choose vehicle Make, Model, Year, Trim

VEHICLE SELECTION

FILTER: Select a make ⌄   All Years ⌄   All models ⌄   All trims ⌄   NEXT →

c. Click "Flash!" **FLASH→**

d. Once done click on the Remote Starter tab and click on "Flash my starter" in order to update the remote starter firmware

e. Click "Flash!" **FLASH→**

STEP 2. CONNECT

GRAY TELEMATICS PORT

BLADE-AL (64)

CM7200

Installation:
Place antenna 3 inches (minimum) from any obstructions

Orientation: Vertical; antenna facing downwards (as seen in diagram)

Antenna: Cord length 9 feet

STEP 3. ADD A DEVICE/VEHICLE TO AN ACCOUNT

a. Download the App and Log into your account (see page 2 of this document for details)

b. Click the "+" sign at the bottom right of the Application screen. This will allow you to temporarily add and configure your customers system inside your personal account. A system refers to the Antenna being installed in the windsheild of the vehicle.

c. Before adding a system to your device, ensure the remote starter IS NOT armed/locked or in Valet mode and set the ignition of the vehicle to the On position.

d. Then Tap to "Scan QR Code" and use the smartphone camera to scan the QR Code located on top of the antenna.

e. Once connected, the system is in "Installer Mode". Follow the on-screen instructions for configuring the system.

STEP 4. PRE-CONFIGURE THE APPLICATION EXPERIENCE FOR YOUR CUSTOMER

a. Start by setting the protocol of the antenna being used. This is acheived by selecting the Brand, Model and protocol used inside the Remote starter. When done, click on "Confirm". System will now try to communicate with the remote starter to confirm that all settings related to protocol are valid.

b. Once back in the control panel, click on the Settings Gear at the top right of the screen and edit the Vehicle name, configure the Auxiliaries that might have been added (if applicable) and click "OK" when done. Then choose the vehicle to display inside the control panel in the VEHICLE IMAGE section and click OK.

c. When your configurations are all completed, click "OK" at the top right corner. All Configurations will take effect.

STEP 5. TESTING THE SYSTEM

When the system is connected and fully configured, testing can begin. Test all the application functions (Start, Stop, Lock, Unlock, Auxiliaries, Etc.) When testing is completed, tap on the "installer icon" at the top of control screen. When prompted Click "Yes, and delete system from account" since this is the installer mode and not the End User mode. This will make the system "Ready for Customer Delivery".

Also make sure that the Owners Card is handed to the Owner of the vehicle or attached to the vehicle keychain. Doing this will ensure that the instructions on how to setup their App, Account and add the System is done correctly by using the system QR Code affixed on the windsheild mounted antenna.

NOTE : UNDER ANY CIRCUMSTANCES, PLEASE DO NOT REMOVE THE QR CODE FROM THE ANTENNA!

CAR:LINK™ INSTALLATION, WIRING & PROGRAMMING GUIDE

PARTS REQUIRED FOR INSTALLATION OF : COMPUSTAR CM6200

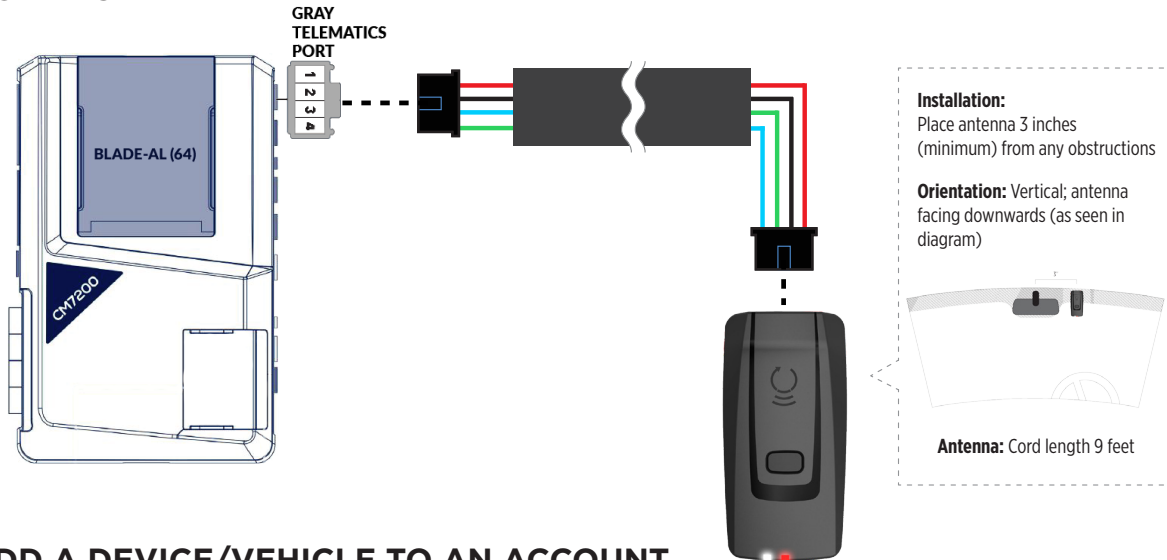| XTX-3000	IVU-CAB-4W	Compustar CM6200	BLADE-AL (64)

STEP 1. CONFIGURE THE REMOTE STARTER

The ADS Weblink (ADS-USB) is required to properly configure the CM6200 remote starter to accept the RF kit system. When flashing the CM6200 remote starter, **please follow this procedure in order to configure correctly your remote starter.**

a. Go to **www.idatalink.com** and click on "Flash your module"	FLASH YOUR MODULE
b. Under the ADS-BLADE AL tab, Choose vehicle Make, Model, Year, Trim	VEHICLE SELECTION — FILTER: Select a make / All Years / All models / All trims / NEXT→
c. Click "Flash!"	FLASH→
d. Once done click on the Remote Starter tab and click on "Flash my starter" in order to update the remote starter firmware	
e. Click "Flash!"	FLASH→

STEP 2. CONNECT

Installation:
Place antenna 3 inches (minimum) from any obstructions

Orientation: Vertical; antenna facing downwards (as seen in diagram)

Antenna: Cord length 9 feet

STEP 3. ADD A DEVICE/VEHICLE TO AN ACCOUNT

a. Download the App and Log into your account (see page 2 of this document for details)

b. Click the "+" sign at the bottom right of the Application screen. This will allow you to temporarily add and configure your customers system inside your personal account. A system refers to the Antenna being installed in the windsheild of the vehicle.

c. Before adding a system to your device, ensure the remote starter IS NOT armed/locked or in Valet mode and set the ignition of the vehicle to the On position.

d. Then Tap to "Scan QR Code" and use the smartphone camera to scan the QR Code located on top of the antenna.

e. Once connected, the system is in "Installer Mode". Follow the on-screen instructions for configuring the system.

STEP 4. PRE-CONFIGURE THE APPLICATION EXPERIENCE FOR YOUR CUSTOMER

a. Start by setting the protocol of the antenna being used. This is acheived by selecting the Brand, Model and protocol used inside the Remote starter. When done, click on "Confirm". System will now try to communicate with the remote starter to confirm that all settings related to protocol are valid.

b. Once back in the control panel, click on the Settings Gear at the top right of the screen and edit the Vehicle name, configure the Auxiliaries that might have been added (if applicable) and click "OK" when done. Then choose the vehicle to display inside the control panel in the VEHICLE IMAGE section and click OK.

c. When your configurations are all completed, click "OK" at the top right corner. All Configurations will take effect.

STEP 5. TESTING THE SYSTEM

When the system is connected and fully configured, testing can begin. Test all the application functions (Start, Stop, Lock, Unlock, Auxiliaries, Etc.) When testing is completed, tap on the "installer icon" at the top of control screen. When prompted Click "Yes, and delete system from account" since this is the installer mode and not the End User mode. This will make the system "Ready for Customer Delivery".

Also make sure that the Owners Card is handed to the Owner of the vehicle or attached to the vehicle keychain. Doing this will ensure that the instructions on how to setup their App, Account and add the System is done correctly by using the system QR Code affixed on the windsheild mounted antenna.

NOTE : UNDER ANY CIRCUMSTANCES, PLEASE DO NOT REMOVE THE QR CODE FROM THE ANTENNA!

CAR:LINK™ INSTALLATION, WIRING & PROGRAMMING GUIDE

PARTS REQUIRED FOR INSTALLATION OF : COMPUSTAR DC2

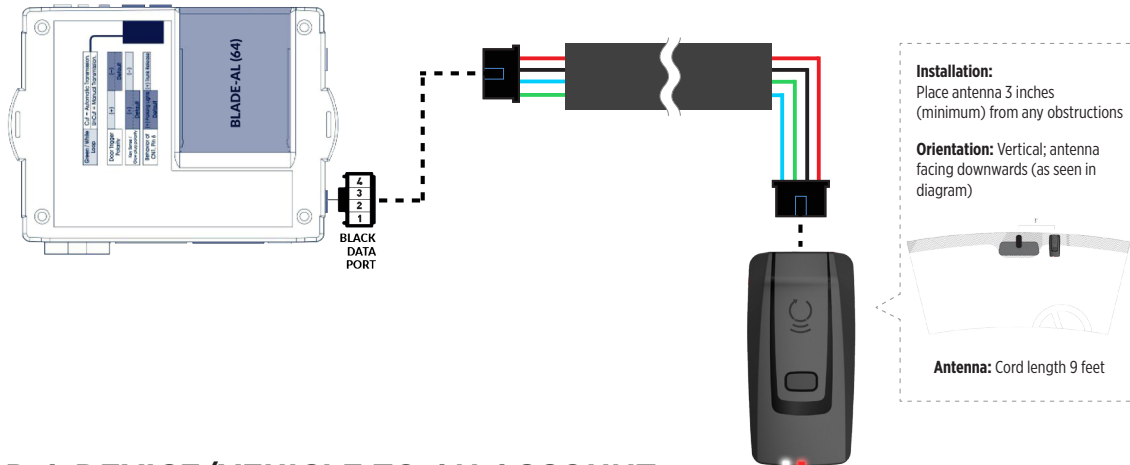| XTX-3000	IVU-CAB-4W	Compustar DC2	

STEP 1. CONFIGURE THE REMOTE STARTER

The ADS Weblink (ADS-USB) is required to properly configure the Compustar DC2 remote starter to accept the RF kit system. When flashing the Compustar DC2 remote starter, **please follow this procedure in order to configure correctly your remote starter.**

a. Go to **www.idatalink.com** and click on "Flash your module"	
b. Using the new Weblink configurator, Choose vehicle Make, Year, Model, Trim.	
c. In the Telematics Device section, Turn On the Drone Telematics option	
d. This will load a firmware starting with:	**"COM-XXX-XXX-XXX"**
e. Click "Flash your device"	

CAR:LINK™ INSTALLATION, WIRING & PROGRAMMING GUIDE

STEP 2. CONNECT

GRAY TELEMATICS PORT

1 2 3 4

Installation:
Place antenna 3 inches (minimum) from any obstructions

Orientation: Vertical; antenna facing downwards (as seen in diagram)

Antenna: Cord length 9 feet

STEP 3. ADD A DEVICE/VEHICLE TO AN ACCOUNT

a. Download the App and Log into your account (see page 2 of this document for details)

b. Click the "+" sign at the bottom right of the Application screen. This will allow you to temporarily add and configure your customers system inside your personal account. A system refers to the Antenna being installed in the windsheild of the vehicle.

c. Before adding a system to your device, ensure the remote starter IS NOT armed/locked or in Valet mode and set the ignition of the vehicle to the On position.

d. Then Tap to "Scan QR Code" and use the smartphone camera to scan the QR Code located on top of the antenna.

e. Once connected, the system is in "Installer Mode". Follow the on-screen instructions for configuring the system.

STEP 4. PRE-CONFIGURE THE APPLICATION EXPERIENCE FOR YOUR CUSTOMER

a. Start by setting the protocol of the antenna being used. This is acheived by selecting the Brand, Model and protocol used inside the Remote starter. When done, click on "Confirm". System will now try to communicate with the remote starter to confirm that all settings related to protocol are valid.

b. Once back in the control panel, click on the Settings Gear at the top right of the screen and edit the Vehicle name, configure the Auxiliaries that might have been added (if applicable) and click "OK" when done. Then choose the vehicle to display inside the control panel in the VEHICLE IMAGE section and click OK.

c. When your configurations are all completed, click "OK" at the top right corner. All Configurations will take effect.

STEP 5. TESTING THE SYSTEM

When the system is connected and fully configured, testing can begin. Test all the application functions (Start, Stop, Lock, Unlock, Auxiliaries, Etc.) When testing is completed, tap on the "installer icon" at the top of control screen. When prompted Click "Yes, and delete system from account" since this is the installer mode and not the End User mode. This will make the system "Ready for Customer Delivery".

Also make sure that the Owners Card is handed to the Owner of the vehicle or attached to the vehicle keychain. Doing this will ensure that the instructions on how to setup their App, Account and add the System is done correctly by using the system QR Code affixed on the windsheild mounted antenna.
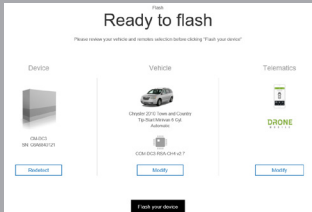
NOTE : UNDER ANY CIRCUMSTANCES, PLEASE DO NOT REMOVE THE QR CODE FROM THE ANTENNA!

CAR:LINK™ INSTALLATION, WIRING & PROGRAMMING GUIDE

PARTS REQUIRED FOR INSTALLATION OF : COMPUSTAR DC3

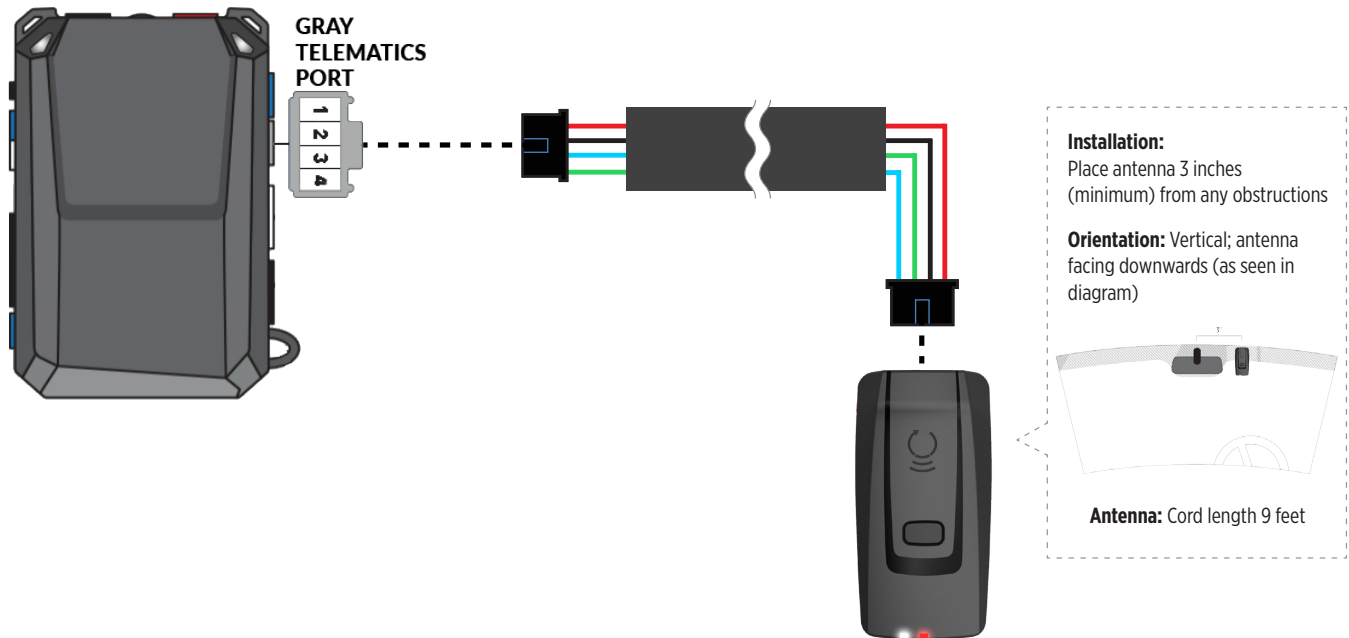| XTX-3000	IVU-CAB-4W	Compustar DC3	

STEP 1. CONFIGURE THE REMOTE STARTER

The ADS Weblink (ADS-USB) is required to properly configure the Compustar DC3 remote starter to accept the RF kit system. When flashing the Compustar DC3 remote starter, **please follow this procedure in order to configure correctly your remote starter.**

a. Go to **www.idatalink.com** and click on "Flash your module"	
b. Using the new Weblink configurator, Choose vehicle Make, Year, Model, Trim.	
c. In the Telematics Device section, Turn On the Drone Telematics option	
d. This will load a firmware starting with:	**"COM-XXX-XXX-XXX"**
e. Click "Flash your device"	

CAR:LINK™ INSTALLATION, WIRING & PROGRAMMING GUIDE

STEP 2. CONNECT

GRAY TELEMATICS PORT

1
2
3
4

Installation:
Place antenna 3 inches (minimum) from any obstructions

Orientation: Vertical; antenna facing downwards (as seen in diagram)

Antenna: Cord length 9 feet

STEP 3. ADD A DEVICE/VEHICLE TO AN ACCOUNT

a. Download the App and Log into your account (see page 2 of this document for details)

b. Click the "+" sign at the bottom right of the Application screen. This will allow you to temporarily add and configure your customers system inside your personal account. A system refers to the Antenna being installed in the windsheild of the vehicle.

c. Before adding a system to your device, ensure the remote starter IS NOT armed/locked or in Valet mode and set the ignition of the vehicle to the On position.

d. Then Tap to "Scan QR Code" and use the smartphone camera to scan the QR Code located on top of the antenna.

e. Once connected, the system is in "Installer Mode". Follow the on-screen instructions for configuring the system.

STEP 4. PRE-CONFIGURE THE APPLICATION EXPERIENCE FOR YOUR CUSTOMER

a. Start by setting the protocol of the antenna being used. This is acheived by selecting the Brand, Model and protocol used inside the Remote starter. When done, click on "Confirm". System will now try to communicate with the remote starter to confirm that all settings related to protocol are valid.

b. Once back in the control panel, click on the Settings Gear at the top right of the screen and edit the Vehicle name, configure the Auxiliaries that might have been added (if applicable) and click "OK" when done. Then choose the vehicle to display inside the control panel in the VEHICLE IMAGE section and click OK.

c. When your configurations are all completed, click "OK" at the top right corner. All Configurations will take effect.

STEP 5. TESTING THE SYSTEM

When the system is connected and fully configured, testing can begin. Test all the application functions (Start, Stop, Lock, Unlock, Auxiliaries, Etc.) When testing is completed, tap on the "installer icon" at the top of control screen. When prompted Click "Yes, and delete system from account" since this is the installer mode and not the End User mode. This will make the system "Ready for Customer Delivery".

Also make sure that the Owners Card is handed to the Owner of the vehicle or attached to the vehicle keychain. Doing this will ensure that the instructions on how to setup their App, Account and add the System is done correctly by using the system QR Code affixed on the windsheild mounted antenna.
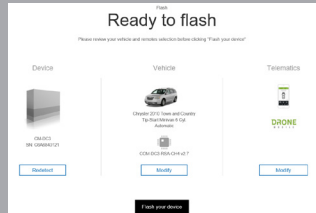
NOTE : UNDER ANY CIRCUMSTANCES, PLEASE DO NOT REMOVE THE QR CODE FROM THE ANTENNA!

CAR:LINK™ INSTALLATION, WIRING & PROGRAMMING GUIDE

PARTS REQUIRED FOR INSTALLATION OF : POLARSTART PRS-13

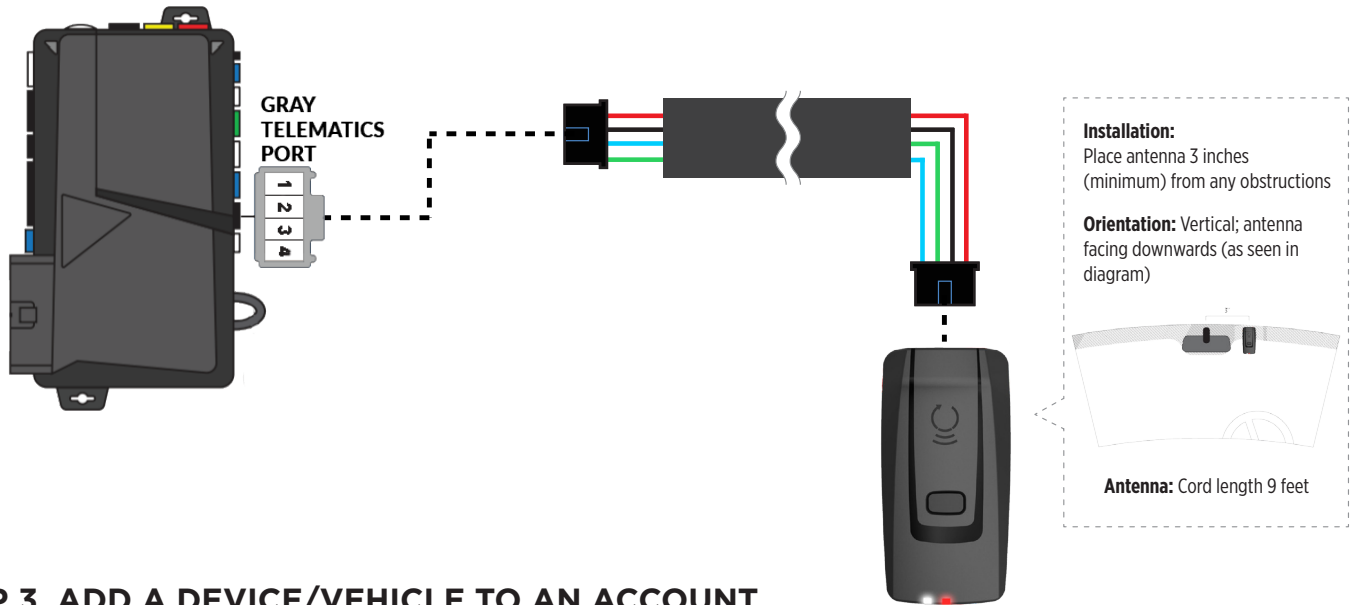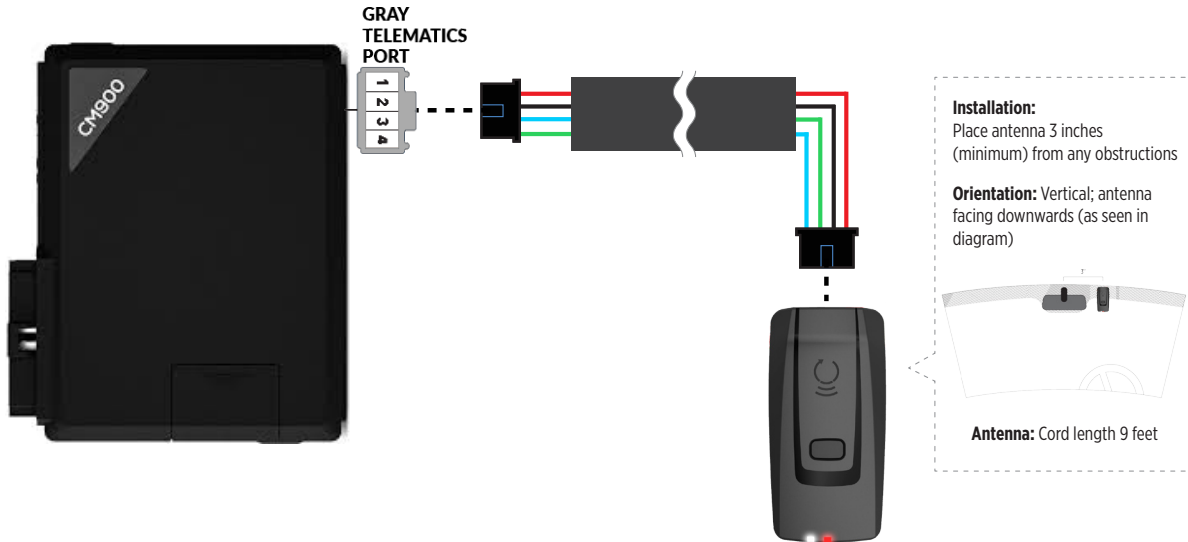| XTX-3000	IVU-CAB-4W	PRS-13	BLADE-AL (64)

STEP 1. CONFIGURE THE REMOTE STARTER

The ADS Weblink (ADS-USB) is required to properly configure the Polarstart PRS-13 remote starter to accept the RF kit system. When flashing the Polarstart PRS-13 remote starter, **please follow this procedure in order to configure correctly your remote starter.**

a. Go to **www.idatalink.com** and click on "Flash your module"

FLASH YOUR MODULE

b. Under the ADS-BLADE AL tab, Choose vehicle Make, Model, Year, Trim

VEHICLE SELECTION

FILTER: | Select a make | All Years | All models | All trims | NEXT→

c. Click "Flash!"

FLASH→

d. Once done click on the Remote Starter tab and click on "Flash my starter" in order to update the remote starter firmware

e. Click "Flash!"

FLASH→

STEP 2. CONNECT

GRAY TELEMATICS PORT

Installation: Place antenna 3 inches (minimum) from any obstructions

Orientation: Vertical; antenna facing downwards (as seen in diagram)

Antenna: Cord length 9 feet

STEP 3. ADD A DEVICE/VEHICLE TO AN ACCOUNT

a. Download the App and Log into your account (see page 2 of this document for details)

b. Click the "+" sign at the bottom right of the Application screen. This will allow you to temporarily add and configure your customers system inside your personal account. A system refers to the Antenna being installed in the windsheild of the vehicle.

c. Before adding a system to your device, ensure the remote starter IS NOT armed/locked or in Valet mode and set the ignition of the vehicle to the On position.

d. Then Tap to "Scan QR Code" and use the smartphone camera to scan the QR Code located on top of the antenna.

e. Once connected, the system is in "Installer Mode". Follow the on-screen instructions for configuring the system.

STEP 4. PRE-CONFIGURE THE APPLICATION EXPERIENCE FOR YOUR CUSTOMER

a. Start by setting the protocol of the antenna being used. This is acheived by selecting the Brand, Model and protocol used inside the Remote starter. When done, click on "Confirm". System will now try to communicate with the remote starter to confirm that all settings related to protocol are valid.

b. Once back in the control panel, click on the Settings Gear at the top right of the screen and edit the Vehicle name, configure the Auxiliaries that might have been added (if applicable) and click "OK" when done. Then choose the vehicle to display inside the control panel in the VEHICLE IMAGE section and click OK.

c. When your configurations are all completed, click "OK" at the top right corner. All Configurations will take effect.

STEP 5. TESTING THE SYSTEM

When the system is connected and fully configured, testing can begin. Test all the application functions (Start, Stop, Lock, Unlock, Auxiliaries, Etc.) When testing is completed, tap on the "installer icon" at the top of control screen. When prompted Click "Yes, and delete system from account" since this is the installer mode and not the End User mode. This will make the system "Ready for Customer Delivery".

Also make sure that the Owners Card is handed to the Owner of the vehicle or attached to the vehicle keychain. Doing this will ensure that the instructions on how to setup their App, Account and add the System is done correctly by using the system QR Code affixed on the windsheild mounted antenna.
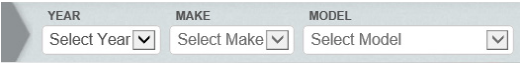
NOTE : UNDER ANY CIRCUMSTANCES, PLEASE DO NOT REMOVE THE QR CODE FROM THE ANTENNA!

CAR:LINK™ INSTALLATION, WIRING & PROGRAMMING GUIDE

PARTS REQUIRED FOR INSTALLATION OF : DIRECTED DBALL 2

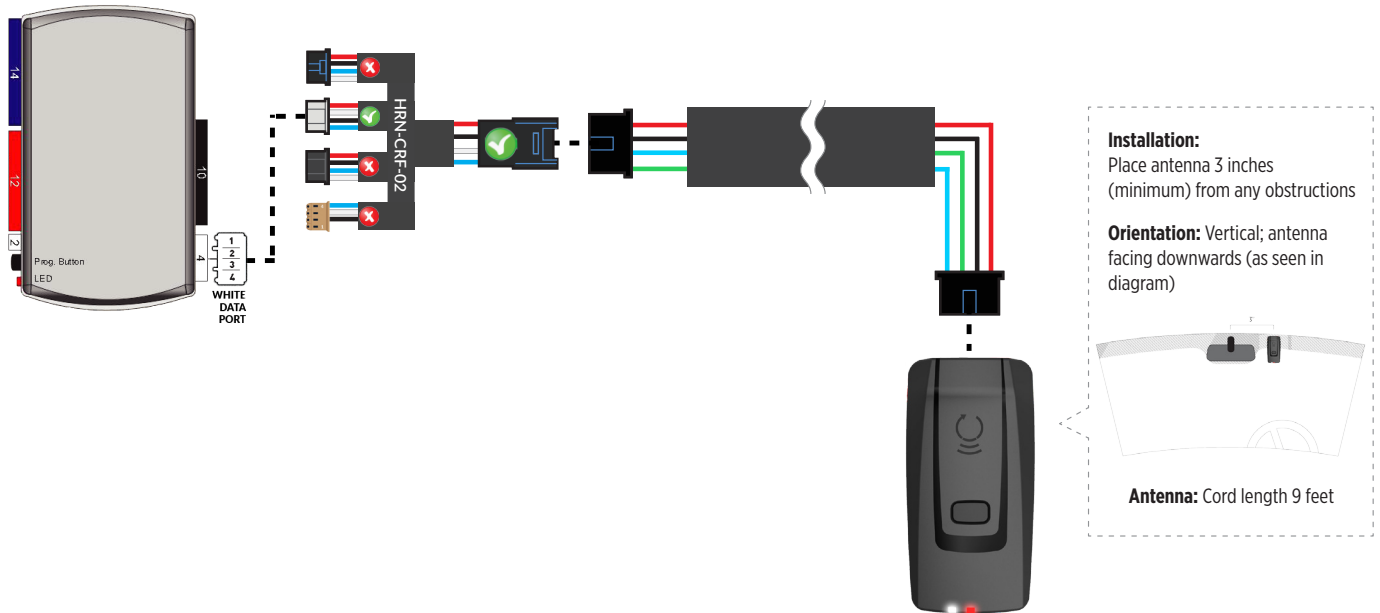| XTX-3000	IVU-CAB-4W	DBALL2	HRN-CRF-02

STEP 1. CONFIGURE THE REMOTE STARTER

The XKloader 2 or 3 is required to properly configure the DBALL 2 remote starter to accept the RF kit system. When flashing the DBALL 2 remote starter, **please follow this procedure in order to configure correctly your remote starter.**

a. Go to **www.directechs.com** and click on "Flash module"

Flash Module

b. Choose vehicle Make, Model, Year

YEAR	MAKE	MODEL
Select Year ▼	Select Make ▼	Select Model ▼

c. Run thru the configuration process and make sure to choose "Config for RSR"

☐ Config for RSR

d. Choose "SmartStart" option.

☐ SMART START

e. Complete the configuration process.

f. Click "Flash!"

Flash

STEP 2. CONNECT

Installation:
Place antenna 3 inches (minimum) from any obstructions

Orientation: Vertical; antenna facing downwards (as seen in diagram)

Antenna: Cord length 9 feet

STEP 3. ADD A DEVICE/VEHICLE TO AN ACCOUNT

a. Download the App and Log into your account (see page 2 of this document for details)

b. Click the "+" sign at the bottom right of the Application screen. This will allow you to temporarily add and configure your customers system inside your personal account. A system refers to the Antenna being installed in the windsheild of the vehicle.

c. Before adding a system to your device, ensure the remote starter IS NOT armed/locked or in Valet mode and set the ignition of the vehicle to the On position.

d. Then Tap to "Scan QR Code" and use the smartphone camera to scan the QR Code located on top of the antenna.

e. Once connected, the system is in "Installer Mode". Follow the on-screen instructions for configuring the system.

STEP 4. PRE-CONFIGURE THE APPLICATION EXPERIENCE FOR YOUR CUSTOMER

a. Start by setting the protocol of the antenna being used. This is acheived by selecting the Brand, Model and protocol used inside the Remote starter. When done, click on "Confirm". System will now try to communicate with the remote starter to confirm that all settings related to protocol are valid.

b. Once back in the control panel, click on the Settings Gear at the top right of the screen and edit the Vehicle name, configure the Auxiliaries that might have been added (if applicable) and click "OK" when done. Then choose the vehicle to display inside the control panel in the VEHICLE IMAGE section and click OK.

c. When your configurations are all completed, click "OK" at the top right corner. All Configurations will take effect.

STEP 5. TESTING THE SYSTEM

When the system is connected and fully configured, testing can begin. Test all the application functions (Start, Stop, Lock, Unlock, Auxiliaries, Etc.) When testing is completed, tap on the "installer icon" at the top of control screen. When prompted Click "Yes, and delete system from account" since this is the installer mode and not the End User mode. This will make the system "Ready for Customer Delivery".

Also make sure that the Owners Card is handed to the Owner of the vehicle or attached to the vehicle keychain. Doing this will ensure that the instructions on how to setup their App, Account and add the System is done correctly by using the system QR Code affixed on the windsheild mounted antenna.

NOTE : UNDER ANY CIRCUMSTANCES, PLEASE DO NOT REMOVE THE QR CODE FROM THE ANTENNA!

CAR:LINK™

INSTALLATION, WIRING & PROGRAMMING GUIDE

PARTS REQUIRED FOR INSTALLATION OF : DIRECTED DB3

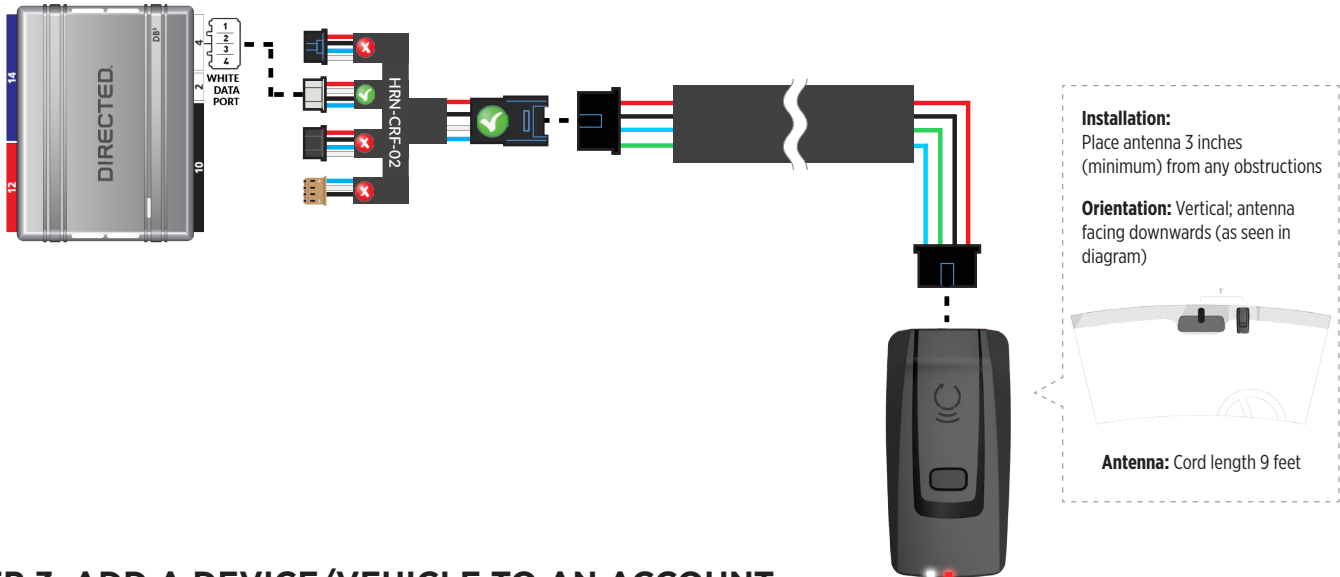| XTX-3000	IVU-CAB-4W	DB3	HRN-CRF-02

STEP 1. CONFIGURE THE REMOTE STARTER

The XKloader 2 or 3 is required to properly configure the DB3 remote starter to accept the RF kit system. When flashing the DB3 remote starter, **please follow this procedure in order to configure correctly your remote starter.**

a. Go to **www.directechs.com** and click on "Flash module"	**Flash Module**
b. Choose vehicle Make, Model, Year	YEAR: Select Year MAKE: Select Make MODEL: Select Model
c. Run thru the configuration process and make sure to choose "Config for RSR"	☐ Config for RSR
d. Choose "SmartStart" option.	☐ SMART START
e. Complete the configuration process.	
f. Click "Flash!"	**Flash**

STEP 2. CONNECT

Installation:
Place antenna 3 inches (minimum) from any obstructions

Orientation: Vertical; antenna facing downwards (as seen in diagram)

Antenna: Cord length 9 feet

STEP 3. ADD A DEVICE/VEHICLE TO AN ACCOUNT

a. Download the App and Log into your account (see page 2 of this document for details)

b. Click the "+" sign at the bottom right of the Application screen. This will allow you to temporarily add and configure your customers system inside your personal account. A system refers to the Antenna being installed in the windsheild of the vehicle.

c. Before adding a system to your device, ensure the remote starter IS NOT armed/locked or in Valet mode and set the ignition of the vehicle to the On position.

d. Then Tap to "Scan QR Code" and use the smartphone camera to scan the QR Code located on top of the antenna.

e. Once connected, the system is in "Installer Mode". Follow the on-screen instructions for configuring the system.

STEP 4. PRE-CONFIGURE THE APPLICATION EXPERIENCE FOR YOUR CUSTOMER

a. Start by setting the protocol of the antenna being used. This is acheived by selecting the Brand, Model and protocol used inside the Remote starter. When done, click on "Confirm". System will now try to communicate with the remote starter to confirm that all settings related to protocol are valid.

b. Once back in the control panel, click on the Settings Gear at the top right of the screen and edit the Vehicle name, configure the Auxiliaries that might have been added (if applicable) and click "OK" when done. Then choose the vehicle to display inside the control panel in the VEHICLE IMAGE section and click OK.

c. When your configurations are all completed, click "OK" at the top right corner. All Configurations will take effect.

STEP 5. TESTING THE SYSTEM

When the system is connected and fully configured, testing can begin. Test all the application functions (Start, Stop, Lock, Unlock, Auxiliaries, Etc.) When testing is completed, tap on the "installer icon" at the top of control screen. When prompted Click "Yes, and delete system from account" since this is the installer mode and not the End User mode. This will make the system "Ready for Customer Delivery".

Also make sure that the Owners Card is handed to the Owner of the vehicle or attached to the vehicle keychain. Doing this will ensure that the instructions on how to setup their App, Account and add the System is done correctly by using the system QR Code affixed on the windsheild mounted antenna.
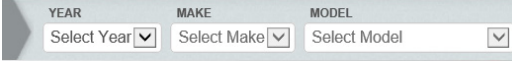
NOTE : UNDER ANY CIRCUMSTANCES, PLEASE DO NOT REMOVE THE QR CODE FROM THE ANTENNA!

CAR:LINK™ INSTALLATION, WIRING & PROGRAMMING GUIDE

PARTS REQUIRED FOR INSTALLATION OF : DIRECTED 4X10 - 5X10 - AF-D600 - ASD200 - ASD-600

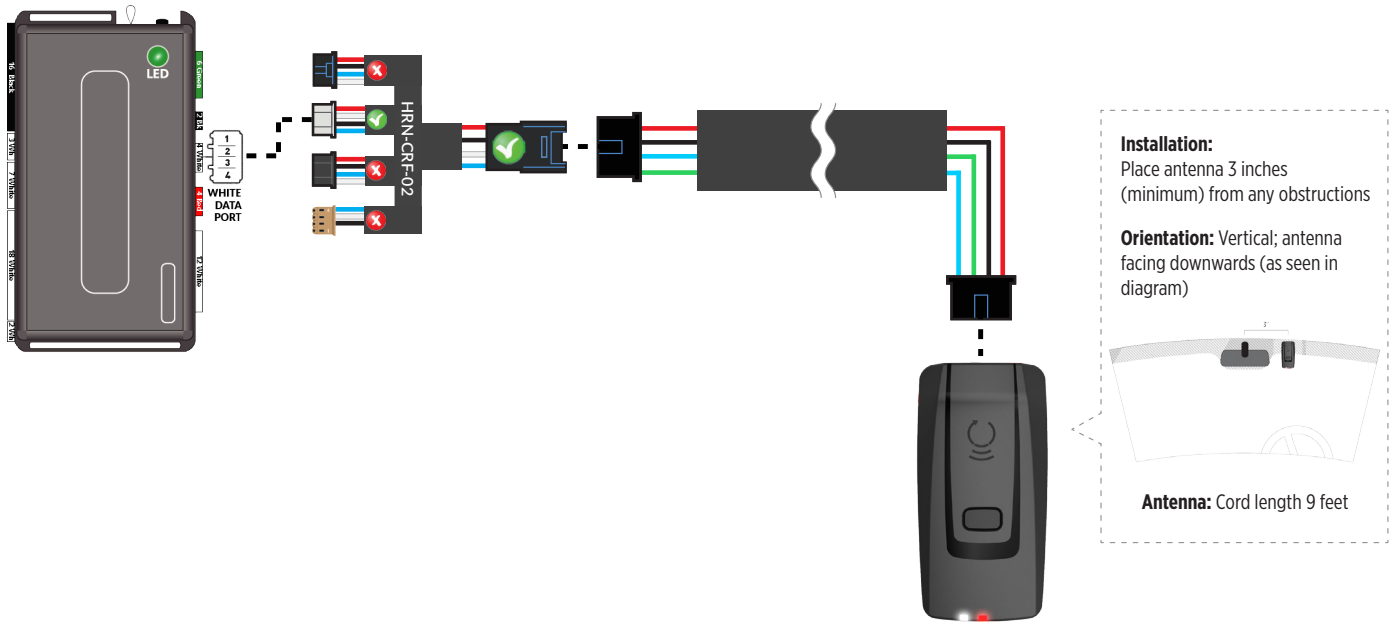| XTX-3000	IVU-CAB-4W	4X10 - 5X10 - AF-D600 ASD200 - ASD600	HRN-CRF-02

STEP 1. CONFIGURE THE REMOTE STARTER

The XKloader 2 or 3 is required to properly configure the 4X10 - 5X10 remote starter to accept the RF kit system. When flashing the 4X10 - 5X10 - AF-D600 - ASD200 - ASD600 remote starter, **please follow this procedure in order to configure correctly your remote starter.**

a. Go to **www.directechs.com** and click on "Flash module"	**Flash Module**
b. Choose vehicle Make, Model, Year	YEAR Select Year ▾ MAKE Select Make ▾ MODEL Select Model ▾
c. Run thru the configuration process and make sure to choose "Remote Start"	☑ Remote Start
d. Choose "SmartStart" option.	☐ SMART START
e. Complete the configuration process.	
f. Click "Flash!"	**Flash**

CAR:LINK™ INSTALLATION, WIRING & PROGRAMMING GUIDE

STEP 2. CONNECT

Installation:
Place antenna 3 inches (minimum) from any obstructions

Orientation: Vertical; antenna facing downwards (as seen in diagram)

Antenna: Cord length 9 feet

STEP 3. ADD A DEVICE/VEHICLE TO AN ACCOUNT

a. Download the App and Log into your account (see page 2 of this document for details)

b. Click the "+" sign at the bottom right of the Application screen. This will allow you to temporarily add and configure your customers system inside your personal account. A system refers to the Antenna being installed in the windsheild of the vehicle.

c. Before adding a system to your device, ensure the remote starter IS NOT armed/locked or in Valet mode and set the ignition of the vehicle to the On position.

d. Then Tap to "Scan QR Code" and use the smartphone camera to scan the QR Code located on top of the antenna.

e. Once connected, the system is in "Installer Mode". Follow the on-screen instructions for configuring the system.

STEP 4. PRE-CONFIGURE THE APPLICATION EXPERIENCE FOR YOUR CUSTOMER

a. Start by setting the protocol of the antenna being used. This is acheived by selecting the Brand, Model and protocol used inside the Remote starter. When done, click on "Confirm". System will now try to communicate with the remote starter to confirm that all settings related to protocol are valid.

b. Once back in the control panel, click on the Settings Gear at the top right of the screen and edit the Vehicle name, configure the Auxiliaries that might have been added (if applicable) and click "OK" when done. Then choose the vehicle to display inside the control panel in the VEHICLE IMAGE section and click OK.

c. When your configurations are all completed, click "OK" at the top right corner. All Configurations will take effect.
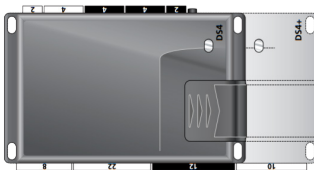
STEP 5. TESTING THE SYSTEM

When the system is connected and fully configured, testing can begin. Test all the application functions (Start, Stop, Lock, Unlock, Auxiliaries, Etc.) When testing is completed, tap on the "installer icon" at the top of control screen. When prompted Click "Yes, and delete system from account" since this is the installer mode and not the End User mode. This will make the system "Ready for Customer Delivery".

Also make sure that the Owners Card is handed to the Owner of the vehicle or attached to the vehicle keychain. Doing this will ensure that the instructions on how to setup their App, Account and add the System is done correctly by using the system QR Code affixed on the windsheild mounted antenna.

NOTE : UNDER ANY CIRCUMSTANCES, PLEASE DO NOT REMOVE THE QR CODE FROM THE ANTENNA!

CAR:LINK™ INSTALLATION, WIRING & PROGRAMMING GUIDE

PARTS REQUIRED FOR INSTALLATION OF : DIRECTED DS4 - DS4+

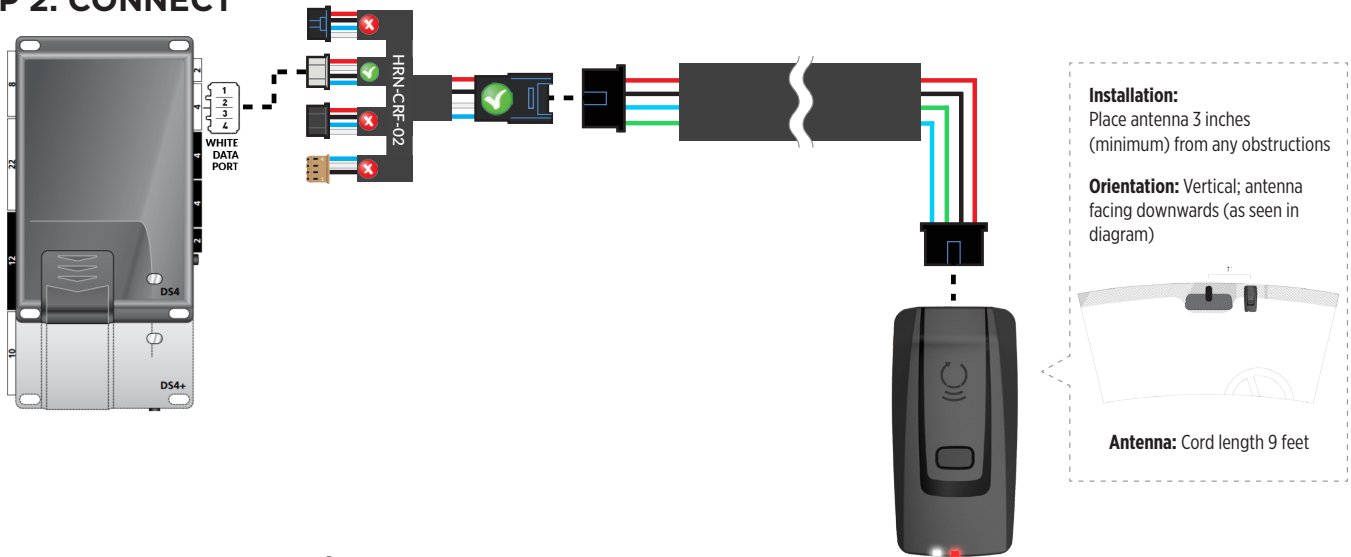| XTX-3000	IVU-CAB-4W	DS4 / DS4+	HRN-CRF-02

STEP 1. CONFIGURE THE REMOTE STARTER

The XKloader 2 or 3 is required to properly configure the DS4 - DS4+ remote starter to accept the RF kit system. When flashing the DS4 - DS4+ remote starter, **please follow this procedure in order to configure correctly your remote starter.**

a. Go to **www.directechs.com** and click on "Flash module"	**Flash Module**
b. Choose vehicle Make, Model, Year	YEAR Select Year MAKE Select Make MODEL Select Model
c. Run thru the configuration process and make sure to choose "Remote Start"	✓ Remote Start
d. Choose "SmartStart" option.	☐ SMART START
e. Complete the configuration process.	
f. Click "Flash!"	**Flash**

CAR:LINK™ INSTALLATION, WIRING & PROGRAMMING GUIDE

STEP 2. CONNECT

Installation:
Place antenna 3 inches (minimum) from any obstructions

Orientation: Vertical; antenna facing downwards (as seen in diagram)

Antenna: Cord length 9 feet

STEP 3. ADD A DEVICE/VEHICLE TO AN ACCOUNT

a. Download the App and Log into your account (see page 2 of this document for details)

b. Click the "+" sign at the bottom right of the Application screen. This will allow you to temporarily add and configure your customers system inside your personal account. A system refers to the Antenna being installed in the windsheild of the vehicle.

c. Before adding a system to your device, ensure the remote starter IS NOT armed/locked or in Valet mode and set the ignition of the vehicle to the On position.

d. Then Tap to "Scan QR Code" and use the smartphone camera to scan the QR Code located on top of the antenna.

e. Once connected, the system is in "Installer Mode". Follow the on-screen instructions for configuring the system.

STEP 4. PRE-CONFIGURE THE APPLICATION EXPERIENCE FOR YOUR CUSTOMER

a. Start by setting the protocol of the antenna being used. This is acheived by selecting the Brand, Model and protocol used inside the Remote starter. When done, click on "Confirm". System will now try to communicate with the remote starter to confirm that all settings related to protocol are valid.

b. Once back in the control panel, click on the Settings Gear at the top right of the screen and edit the Vehicle name, configure the Auxiliaries that might have been added (if applicable) and click "OK" when done. Then choose the vehicle to display inside the control panel in the VEHICLE IMAGE section and click OK.

c. When your configurations are all completed, click "OK" at the top right corner. All Configurations will take effect.

STEP 5. TESTING THE SYSTEM

When the system is connected and fully configured, testing can begin. Test all the application functions (Start, Stop, Lock, Unlock, Auxiliaries, Etc.) When testing is completed, tap on the "installer icon" at the top of control screen. When prompted Click "Yes, and delete system from account" since this is the installer mode and not the End User mode. This will make the system "Ready for Customer Delivery".

Also make sure that the Owners Card is handed to the Owner of the vehicle or attached to the vehicle keychain. Doing this will ensure that the instructions on how to setup their App, Account and add the System is done correctly by using the system QR Code affixed on the windsheild mounted antenna.

NOTE : UNDER ANY CIRCUMSTANCES, PLEASE DO NOT REMOVE THE QR CODE FROM THE ANTENNA!

PARTS REQUIRED FOR INSTALLATION OF : FORTIN EVO-ALL
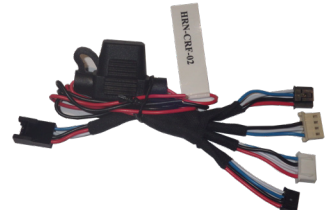
XTX-3000	IVU-CAB-4W	EVO-ALL	HRN-CRF-02

IMPORTANT NOTE: THESE REMOTE STARTER MODELS ARE CURRENTLY NOT SUPPORTED BY THIS PRODUCT.

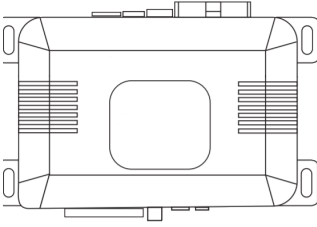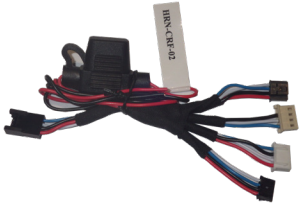## PARTS REQUIRED FOR INSTALLATION OF : FORTIN EVO-ONE

XTX-3000	IVU-CAB-4W	EVO-ONE	HRN-CRF-02
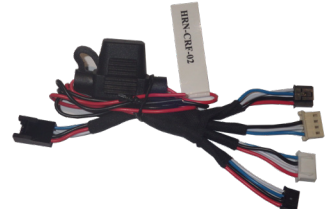
IMPORTANT NOTE: THESE REMOTE STARTER MODELS ARE CURRENTLY NOT SUPPORTED BY THIS PRODUCT.

CAR:LINK™ INSTALLATION, WIRING & PROGRAMMING GUIDE
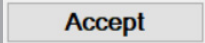
PARTS REQUIRED FOR INSTALLATION OF : PRESTIGE (E) Models

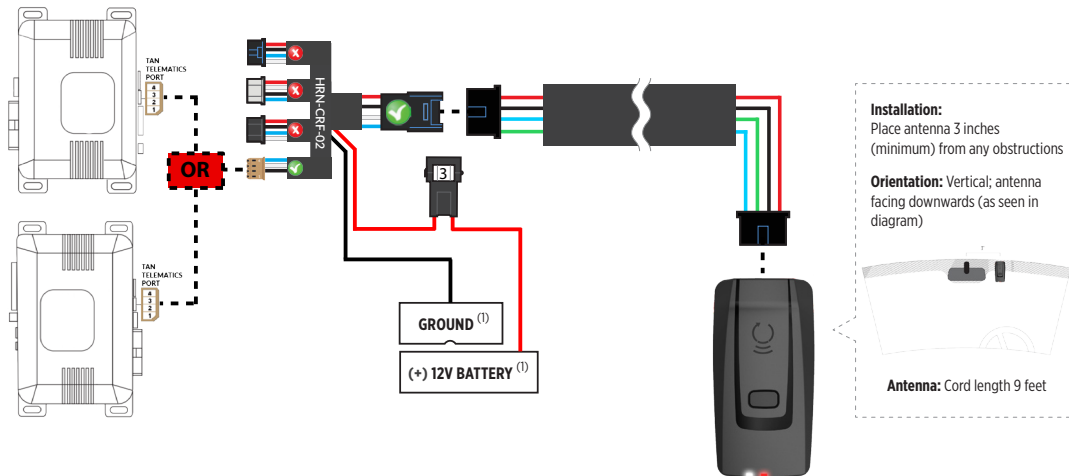| XTX-3000	IVU-CAB-4W	(E) Model	HRN-CRF-02

STEP 1. CONFIGURE THE REMOTE STARTER

The Voxx VEPROG is required to upgrade the latest Firmware and properly configure the Prestige (E) Model remote starter to accept the RF kit system. When updating the Prestige (E) Model remote starter, **please follow this procedure in order to configure correctly your remote starter.**

a. Open "Internet Explorer 11" and go to "WWW.VEPROG.COM"	
b. Click on "Detect Device" button on the center of the screen	Detect Device
c. Click on "Firmware Update" tab, then click on "FLASH" and wait for the update to be completed	**Firmware Update**
d. Choose from the Alarm programming menu, Feature #18, Option #3 or #4 - ADS TEL	18 Data Port Select DBI+Voxx TEL ADS + Voxx TEL DBI + ADS TEL **ADS + ADS TEL**
e. Click "Accept" at the bottom of the Unit option page	Accept

STEP 2. CONNECT

TAN TELEMATICS PORT

HRN-CRF-02

OR

GROUND (1)

(+) 12V BATTERY (1)

Installation:
Place antenna 3 inches (minimum) from any obstructions

Orientation: Vertical; antenna facing downwards (as seen in diagram)

Antenna: Cord length 9 feet

(1) Connect when using with PRESTIGE.

STEP 3. ADD A DEVICE/VEHICLE TO AN ACCOUNT

a. Download the App and Log into your account (see page 2 of this document for details)

b. Click the "+" sign at the bottom right of the Application screen. This will allow you to temporarily add and configure your customers system inside your personal account. A system refers to the Antenna being installed in the windsheild of the vehicle.

c. Before adding a system to your device, ensure the remote starter IS NOT armed/locked or in Valet mode and set the ignition of the vehicle to the On position.

d. Then Tap to "Scan QR Code" and use the smartphone camera to scan the QR Code located on top of the antenna.

e. Once connected, the system is in "Installer Mode". Follow the on-screen instructions for configuring the system.

STEP 4. PRE-CONFIGURE THE APPLICATION EXPERIENCE FOR YOUR CUSTOMER

a. Start by setting the protocol of the antenna being used. This is acheived by selecting the Brand, Model and protocol used inside the Remote starter. When done, click on "Confirm". System will now try to communicate with the remote starter to confirm that all settings related to protocol are valid.

b. Once back in the control panel, click on the Settings Gear at the top right of the screen and edit the Vehicle name, configure the Auxiliaries that might have been added (if applicable) and click "OK" when done. Then choose the vehicle to display inside the control panel in the VEHICLE IMAGE section and click OK.

c. When your configurations are all completed, click "OK" at the top right corner. All Configurations will take effect.
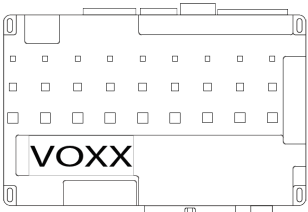
STEP 5. TESTING THE SYSTEM

When the system is connected and fully configured, testing can begin. Test all the application functions (Start, Stop, Lock, Unlock, Auxiliaries, Etc.) When testing is completed, tap on the "installer icon" at the top of control screen. When prompted Click "Yes, and delete system from account" since this is the installer mode and not the End User mode. This will make the system "Ready for Customer Delivery".

Also make sure that the Owners Card is handed to the Owner of the vehicle or attached to the vehicle keychain. Doing this will ensure that the instructions on how to setup their App, Account and add the System is done correctly by using the system QR Code affixed on the windsheild mounted antenna.

NOTE : UNDER ANY CIRCUMSTANCES, PLEASE DO NOT REMOVE THE QR CODE FROM THE ANTENNA!

CAR:LINK™ INSTALLATION, WIRING & PROGRAMMING GUIDE

PARTS REQUIRED FOR INSTALLATION OF : PRESTIGE (Z) Models

XTX-3000	IVU-CAB-4W	(Z) Model	
		VOXX	

STEP 1. CONFIGURE THE REMOTE STARTER

The ADS Weblink (ADS-USB) is required to properly configure the Prestige (Z) model remote starter to accept the RF kit system. When flashing the Prestige (Z) model remote starter, **please follow this procedure in order to configure correctly your remote starter.**

a. Go to **www.flashlogic.com** and click on "Flash your module"	FLASH YOUR MODULE
b. Then click on "Flash my starter" in order to update the remote starter firmware	FLASH MY STARTER
c. Click "Flash!"	FLASH→
d. Then go to "Configure my starter" and ensure the "ADS" option is selected under Programming bank 2, Data Port Protocol.	CONFIGURE MY STARTER
e. Click "Save All"	SAVE ALL

STEP 2. CONNECT

Installation:
Place antenna 3 inches (minimum) from any obstructions

Orientation: Vertical; antenna facing downwards (as seen in diagram)

Antenna: Cord length 9 feet

BLUE TELEMATICS PORT

STEP 3. ADD A DEVICE/VEHICLE TO AN ACCOUNT

a. Download the App and Log into your account (see page 2 of this document for details)

b. Click the "+" sign at the bottom right of the Application screen. This will allow you to temporarily add and configure your customers system inside your personal account. A system refers to the Antenna being installed in the windsheild of the vehicle.

c. Before adding a system to your device, ensure the remote starter IS NOT armed/locked or in Valet mode and set the ignition of the vehicle to the On position.

d. Then Tap to "Scan QR Code" and use the smartphone camera to scan the QR Code located on top of the antenna.

e. Once connected, the system is in "Installer Mode". Follow the on-screen instructions for configuring the system.

STEP 4. PRE-CONFIGURE THE APPLICATION EXPERIENCE FOR YOUR CUSTOMER

a. Start by setting the protocol of the antenna being used. This is acheived by selecting the Brand, Model and protocol used inside the Remote starter. When done, click on "Confirm". System will now try to communicate with the remote starter to confirm that all settings related to protocol are valid.

b. Once back in the control panel, click on the Settings Gear at the top right of the screen and edit the Vehicle name, configure the Auxiliaries that might have been added (if applicable) and click "OK" when done. Then choose the vehicle to display inside the control panel in the VEHICLE IMAGE section and click OK.

c. When your configurations are all completed, click "OK" at the top right corner. All Configurations will take effect.

STEP 5. TESTING THE SYSTEM

When the system is connected and fully configured, testing can begin. Test all the application functions (Start, Stop, Lock, Unlock, Auxiliaries, Etc.) When testing is completed, tap on the "installer icon" at the top of control screen. When prompted Click "Yes, and delete system from account" since this is the installer mode and not the End User mode. This will make the system "Ready for Customer Delivery".

Also make sure that the Owners Card is handed to the Owner of the vehicle or attached to the vehicle keychain. Doing this will ensure that the instructions on how to setup their App, Account and add the System is done correctly by using the system QR Code affixed on the windsheild mounted antenna.

NOTE : UNDER ANY CIRCUMSTANCES, PLEASE DO NOT REMOVE THE QR CODE FROM THE ANTENNA!

CAR:LINK™ INSTALLATION, WIRING & PROGRAMMING GUIDE

PARTS REQUIRED FOR INSTALLATION OF : PURSUIT (E) Models

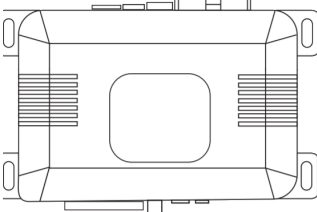| XTX-3000	IVU-CAB-4W	(E) Model (Exc.PRO9233E)	HRN-CRF-02

STEP 1. CONFIGURE THE REMOTE STARTER

The Voxx VEPROG is required to upgrade the latest Firmware and properly configure the Prestige (E) Model remote starter to accept the RF kit system. When updating the Prestige (E) Model remote starter, **please follow this procedure in order to configure correctly your remote starter.**

a. Open "Internet Explorer 11" and go to "WWW.VEPROG.COM"

b. Click on "Detect Device" button on the center of the screen

Detect Device

c. Click on "Firmware Update" tab, then click on "FLASH" and wait for the update to be completed

Firmware Update

d. Choose from the Alarm programming menu, Feature #18, Option #3 or #4 - ADS TEL

18	Data Port Select	DBI+Voxx TEL	ADS + Voxx TEL	DBI + ADS TEL	ADS + ADS TEL

e. Click "Accept" at the bottom of the Unit option page

Accept

CAR:LINK™ INSTALLATION, WIRING & PROGRAMMING GUIDE

STEP 2. CONNECT

Installation:
Place antenna 3 inches (minimum) from any obstructions

Orientation: Vertical; antenna facing downwards (as seen in diagram)

Antenna: Cord length 9 feet

(1) Connect when using with PURSUIT.

STEP 3. ADD A DEVICE/VEHICLE TO AN ACCOUNT

a. Download the App and Log into your account (see page 2 of this document for details)

b. Click the "+" sign at the bottom right of the Application screen. This will allow you to temporarily add and configure your customers system inside your personal account. A system refers to the Antenna being installed in the windsheild of the vehicle.

c. Before adding a system to your device, ensure the remote starter IS NOT armed/locked or in Valet mode and set the ignition of the vehicle to the On position.

d. Then Tap to "Scan QR Code" and use the smartphone camera to scan the QR Code located on top of the antenna.

e. Once connected, the system is in "Installer Mode". Follow the on-screen instructions for configuring the system.

STEP 4. PRE-CONFIGURE THE APPLICATION EXPERIENCE FOR YOUR CUSTOMER

a. Start by setting the protocol of the antenna being used. This is acheived by selecting the Brand, Model and protocol used inside the Remote starter. When done, click on "Confirm". System will now try to communicate with the remote starter to confirm that all settings related to protocol are valid.

b. Once back in the control panel, click on the Settings Gear at the top right of the screen and edit the Vehicle name, configure the Auxiliaries that might have been added (if applicable) and click "OK" when done. Then choose the vehicle to display inside the control panel in the VEHICLE IMAGE section and click OK.

c. When your configurations are all completed, click "OK" at the top right corner. All Configurations will take effect.

STEP 5. TESTING THE SYSTEM

When the system is connected and fully configured, testing can begin. Test all the application functions (Start, Stop, Lock, Unlock, Auxiliaries, Etc.) When testing is completed, tap on the "installer icon" at the top of control screen. When prompted Click "Yes, and delete system from account" since this is the installer mode and not the End User mode. This will make the system "Ready for Customer Delivery".

Also make sure that the Owners Card is handed to the Owner of the vehicle or attached to the vehicle keychain. Doing this will ensure that the instructions on how to setup their App, Account and add the System is done correctly by using the system QR Code affixed on the windsheild mounted antenna.

NOTE : UNDER ANY CIRCUMSTANCES, PLEASE DO NOT REMOVE THE QR CODE FROM THE ANTENNA!

CAR:LINK™ INSTALLATION, WIRING & PROGRAMMING GUIDE

PARTS REQUIRED FOR INSTALLATION OF : CODE SYSTEMS

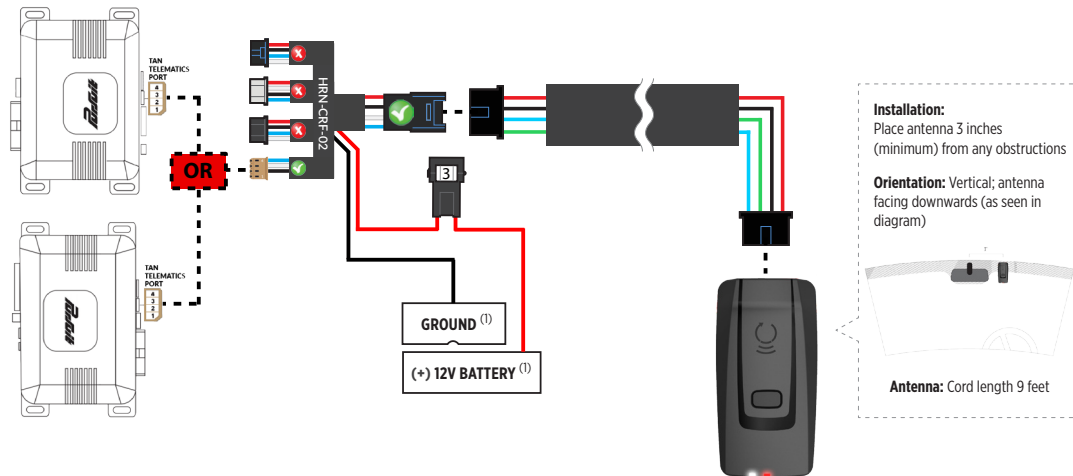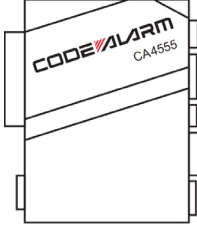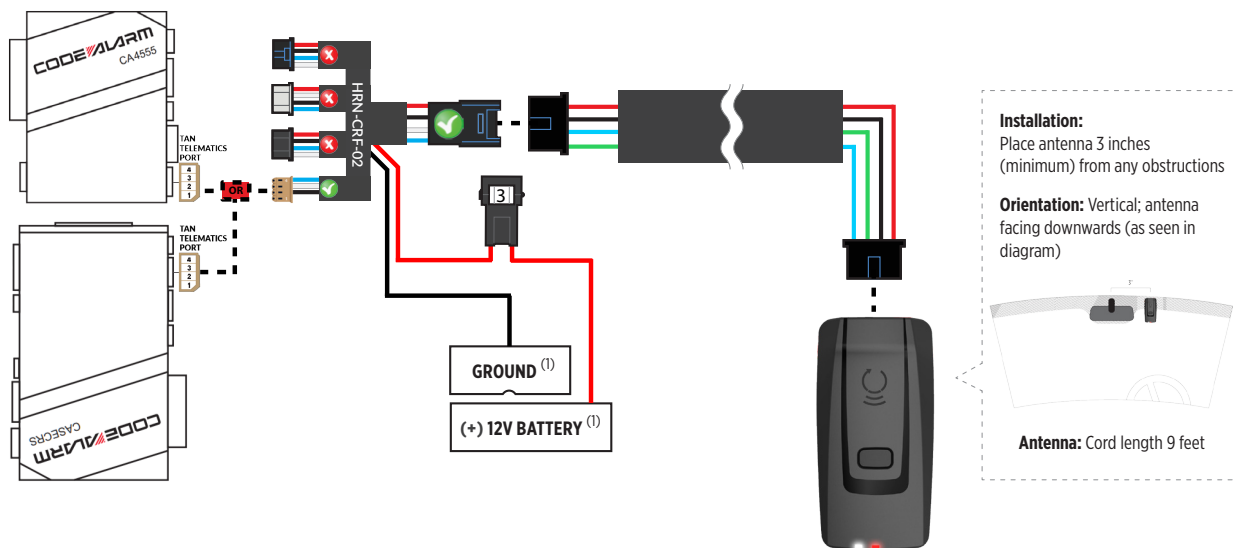| XTX-3000	IVU-CAB-4W	CASECRS, CARS, CA4555, CA4055 or CA5055	HRN-CRF-02

STEP 1. CONFIGURE THE REMOTE STARTER

The Voxx VEPROG is required to upgrade the latest Firmware and properly configure the Code Alarm CASECRS, CARS, CA4555, CA4055 or CA5055 remote starter to accept the RF kit system. When updating the Code Alarm CASECRS, CARS, CA4555, CA4055 or CA5055 remote starter, **please follow this procedure in order to configure correctly your remote starter.**

a. Open the "Code Alarm Utility App"	
b. Click on "Firmware Update" button at the top right of the screen and wait for the update to be completed	Firmware Update
c. Choose from the programming Bank #2, Feature #9, Option #3 or #4 - ADS Telematics	**2-9 DBI Port Protocol /Telematic Port Protocol** ○ DBI /Voxx Telematic (1 LED FLASH) ○ ADS /Voxx Telematic (2 LED FLASH) ○ DBI/ ADS Telematic (3 LED FLASH) ◉ ADS/ ADS Telematic (4 LED FLASH)
d. Click "Accept" at the bottom of the Unit option page	Accept

STEP 2. CONNECT

(1) Connect when using with CODE ALARM.

Installation:
Place antenna 3 inches (minimum) from any obstructions

Orientation: Vertical; antenna facing downwards (as seen in diagram)

Antenna: Cord length 9 feet

STEP 3. ADD A DEVICE/VEHICLE TO AN ACCOUNT

a. Download the App and Log into your account (see page 2 of this document for details)

b. Click the "+" sign at the bottom right of the Application screen. This will allow you to temporarily add and configure your customers system inside your personal account. A system refers to the Antenna being installed in the windsheild of the vehicle.

c. Before adding a system to your device, ensure the remote starter IS NOT armed/locked or in Valet mode and set the ignition of the vehicle to the On position.

d. Then Tap to "Scan QR Code" and use the smartphone camera to scan the QR Code located on top of the antenna.

e. Once connected, the system is in "Installer Mode". Follow the on-screen instructions for configuring the system.

STEP 4. PRE-CONFIGURE THE APPLICATION EXPERIENCE FOR YOUR CUSTOMER

a. Start by setting the protocol of the antenna being used. This is acheived by selecting the Brand, Model and protocol used inside the Remote starter. When done, click on "Confirm". System will now try to communicate with the remote starter to confirm that all settings related to protocol are valid.

b. Once back in the control panel, click on the Settings Gear at the top right of the screen and edit the Vehicle name, configure the Auxiliaries that might have been added (if applicable) and click "OK" when done. Then choose the vehicle to display inside the control panel in the VEHICLE IMAGE section and click OK.

c. When your configurations are all completed, click "OK" at the top right corner. All Configurations will take effect.
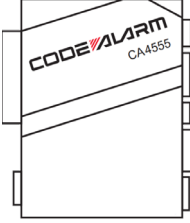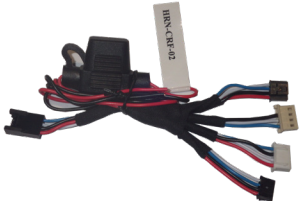
STEP 5. TESTING THE SYSTEM

When the system is connected and fully configured, testing can begin. Test all the application functions (Start, Stop, Lock, Unlock, Auxiliaries, Etc.) When testing is completed, tap on the "installer icon" at the top of control screen. When prompted Click "Yes, and delete system from account" since this is the installer mode and not the End User mode. This will make the system "Ready for Customer Delivery".

Also make sure that the Owners Card is handed to the Owner of the vehicle or attached to the vehicle keychain. Doing this will ensure that the instructions on how to setup their App, Account and add the System is done correctly by using the system QR Code affixed on the windsheild mounted antenna.

NOTE : UNDER ANY CIRCUMSTANCES, PLEASE DO NOT REMOVE THE QR CODE FROM THE ANTENNA!

CAR:LINK™ INSTALLATION, WIRING & PROGRAMMING GUIDE

PARTS REQUIRED FOR INSTALLATION OF : OLDER CODE SYSTEMS

XTX-3000	IVU-CAB-4W	OLDER CODE ALARM	HRN-CRF-02

STEP 1. CONFIGURE THE REMOTE STARTER

The Older Code Alarm remote starter are already pre-configured to accept the RF kit system. No extra programming required.

STEP 2. CONNECT

Installation:
Place antenna 3 inches (minimum) from any obstructions

Orientation: Vertical; antenna facing downwards (as seen in diagram)

Antenna: Cord length 9 feet

GROUND (1)

(+) 12V BATTERY (1)
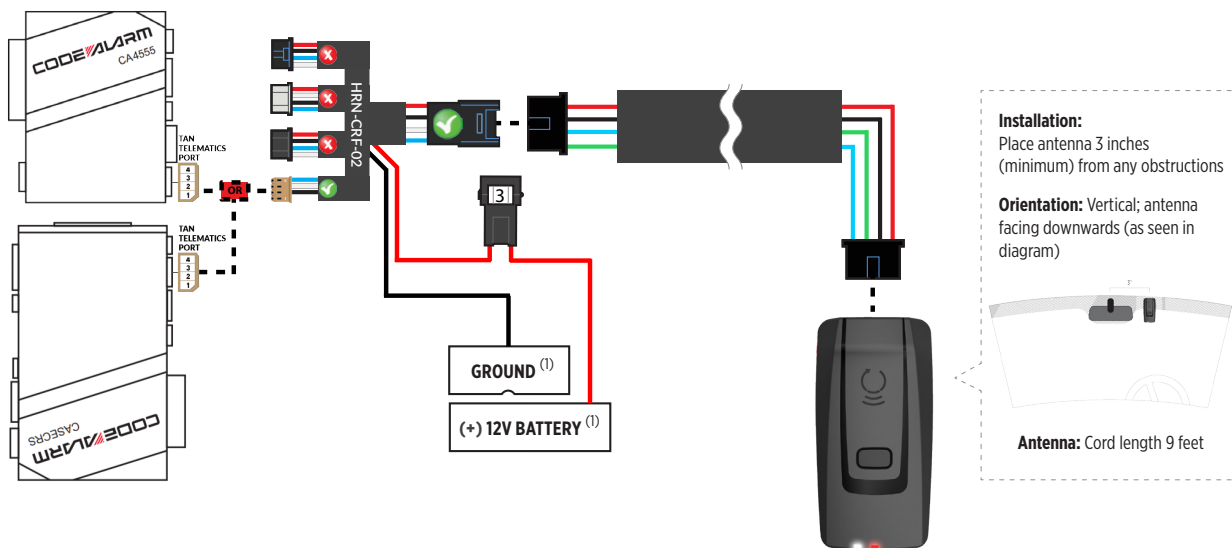
(1) Connect when using with CODE ALARM.

STEP 3. ADD A DEVICE/VEHICLE TO AN ACCOUNT

a. Download the App and Log into your account (see page 2 of this document for details)

b. Click the "+" sign at the bottom right of the Application screen. This will allow you to temporarily add and configure your customers system inside your personal account. A system refers to the Antenna being installed in the windsheild of the vehicle.

c. Before adding a system to your device, ensure the remote starter IS NOT armed/locked or in Valet mode and set the ignition of the vehicle to the On position.

d. Then Tap to "Scan QR Code" and use the smartphone camera to scan the QR Code located on top of the antenna.

e. Once connected, the system is in "Installer Mode". Follow the on-screen instructions for configuring the system.

STEP 4. PRE-CONFIGURE THE APPLICATION EXPERIENCE FOR YOUR CUSTOMER

a. Start by setting the protocol of the antenna being used. This is acheived by selecting the Brand, Model and protocol used inside the Remote starter. When done, click on "Confirm". System will now try to communicate with the remote starter to confirm that all settings related to protocol are valid.

b. Once back in the control panel, click on the Settings Gear at the top right of the screen and edit the Vehicle name, configure the Auxiliaries that might have been added (if applicable) and click "OK" when done. Then choose the vehicle to display inside the control panel in the VEHICLE IMAGE section and click OK.

c. When your configurations are all completed, click "OK" at the top right corner. All Configurations will take effect.

STEP 5. TESTING THE SYSTEM

When the system is connected and fully configured, testing can begin. Test all the application functions (Start, Stop, Lock, Unlock, Auxiliaries, Etc.) When testing is completed, tap on the "installer icon" at the top of control screen. When prompted Click "Yes, and delete system from account" since this is the installer mode and not the End User mode. This will make the system "Ready for Customer Delivery".

Also make sure that the Owners Card is handed to the Owner of the vehicle or attached to the vehicle keychain. Doing this will ensure that the instructions on how to setup their App, Account and add the System is done correctly by using the system QR Code affixed on the windsheild mounted antenna.

NOTE : UNDER ANY CIRCUMSTANCES, PLEASE DO NOT REMOVE THE QR CODE FROM THE ANTENNA!
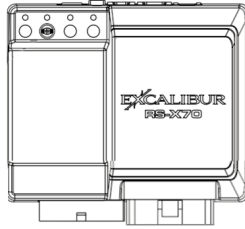
CAR:LINK™ INSTALLATION, WIRING & PROGRAMMING GUIDE

PARTS REQUIRED FOR INSTALLATION OF : OMEGA RS-X70

XTX-3000	IVU-CAB-4W	RS-X70	OL-ADAPTER-B2G (optional)

STEP 1. CONFIGURE THE REMOTE STARTER

The ADS Weblink (ADS-USB) is required to properly configure the Omega RS-X70 remote starter to accept the RF kit system. **Follow this procedure in order to configure correctly your remote starter.**

a. Go to **www.omegaweblink.com** and click on "Flash your module"	**FLASH YOUR MODULE**
b. Go Under "FLASH MY STARTER" tab	**FLASH MY STARTER**
c. Click "Flash!"	**FLASH→**
d. Once done, click on "CONFIGURE MY STARTER" tab	**CONFIGURE MY STARTER**
e. Find "Data Port Protocol" and set it to "Green=iData"	Green = DBI Black = DBI Green = DBI Black = iData Green = iData Black = DBI Green = iData Black = iData
f. Click "Save Now"	**SAVE NOW**

56

STEP 2. CONNECT

Installation:
Place antenna 3 inches (minimum) from any obstructions

Orientation: Vertical; antenna facing downwards (as seen in diagram)

Antenna: Cord length 9 feet

BLACK DATA PORT

STEP 3. ADD A DEVICE/VEHICLE TO AN ACCOUNT

a. Download the App and Log into your account (see page 2 of this document for details)

b. Click the "+" sign at the bottom right of the Application screen. This will allow you to temporarily add and configure your customers system inside your personal account. A system refers to the Antenna being installed in the windsheild of the vehicle.

c. Before adding a system to your device, ensure the remote starter IS NOT armed/locked or in Valet mode and set the ignition of the vehicle to the On position.

d. Then Tap to "Scan QR Code" and use the smartphone camera to scan the QR Code located on top of the antenna.

e. Once connected, the system is in "Installer Mode". Follow the on-screen instructions for configuring the system.

STEP 4. PRE-CONFIGURE THE APPLICATION EXPERIENCE FOR YOUR CUSTOMER

a. Start by setting the protocol of the antenna being used. This is acheived by selecting the Brand, Model and protocol used inside the Remote starter. When done, click on "Confirm". System will now try to communicate with the remote starter to confirm that all settings related to protocol are valid.

b. Once back in the control panel, click on the Settings Gear at the top right of the screen and edit the Vehicle name, configure the Auxiliaries that might have been added (if applicable) and click "OK" when done. Then choose the vehicle to display inside the control panel in the VEHICLE IMAGE section and click OK.

c. When your configurations are all completed, click "OK" at the top right corner. All Configurations will take effect.

STEP 5. TESTING THE SYSTEM

When the system is connected and fully configured, testing can begin. Test all the application functions (Start, Stop, Lock, Unlock, Auxiliaries, Etc.) When testing is completed, tap on the "installer icon" at the top of control screen. When prompted Click "Yes, and delete system from account" since this is the installer mode and not the End User mode. This will make the system "Ready for Customer Delivery".

Also make sure that the Owners Card is handed to the Owner of the vehicle or attached to the vehicle keychain. Doing this will ensure that the instructions on how to setup their App, Account and add the System is done correctly by using the system QR Code affixed on the windsheild mounted antenna.

NOTE : UNDER ANY CIRCUMSTANCES, PLEASE DO NOT REMOVE THE QR CODE FROM THE ANTENNA!

CAR:LINK™ INSTALLATION, WIRING & PROGRAMMING GUIDE

PARTS REQUIRED FOR INSTALLATION OF : OMEGA AL-XX70-B

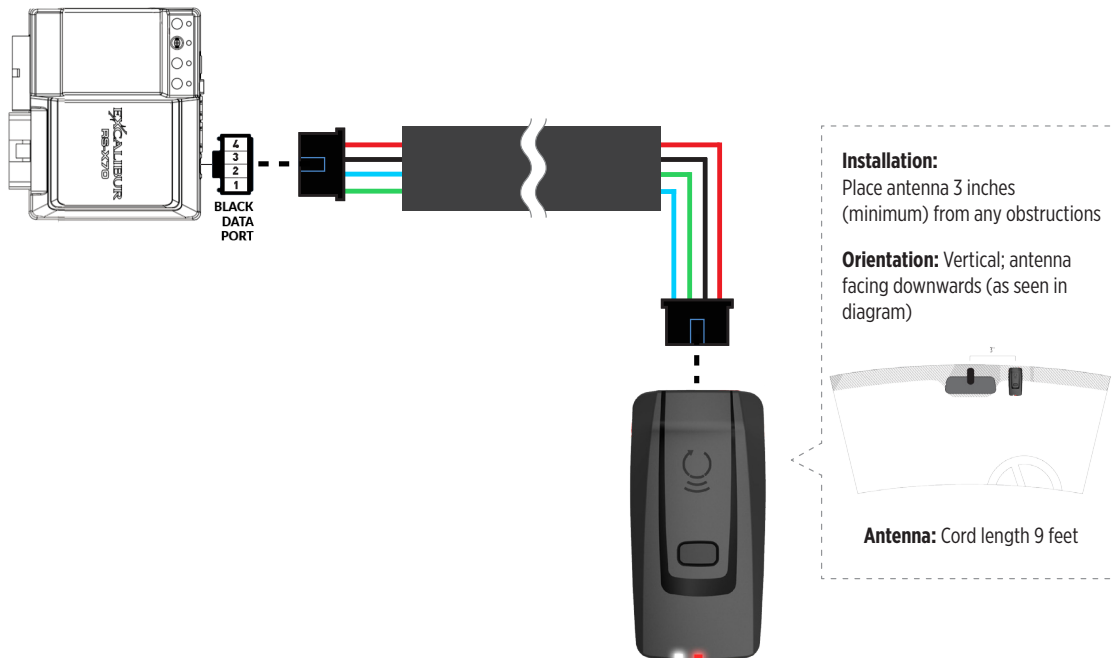| XTX-3000	IVU-CAB-4W	AL-XX70-B	OL-ADAPTER-B2G (optional)	OL-BLADE-AL (64)

STEP 1. CONFIGURE THE REMOTE STARTER

The ADS Weblink (ADS-USB) is required to properly configure the Omega AL-XX70-B remote starter to accept the RF kit system. **Follow this procedure in order to configure correctly your remote starter.**

a. Go to **www.omegaweblink.com** and click on "Flash your module"	FLASH YOUR MODULE
b. Go Under "FLASH MY STARTER" tab	FLASH MY STARTER
c. Click "Flash!"	FLASH→
d. Once done, click on "CONFIGURE MY STARTER" tab	CONFIGURE MY STARTER
e. Find "Data Port Protocol" and set it to "Green=iData"	Green = DBI Black = DBI Green = DBI Black = iData Green = iData Black = DBI Green = iData Black = iData
f. Click "Save Now"	SAVE NOW

CAR:LINK™ INSTALLATION, WIRING & PROGRAMMING GUIDE

STEP 2. CONNECT

Installation:
Place antenna 3 inches (minimum) from any obstructions

Orientation: Vertical; antenna facing downwards (as seen in diagram)

Antenna: Cord length 9 feet

BLACK DATA PORT

STEP 3. ADD A DEVICE/VEHICLE TO AN ACCOUNT

a. Download the App and Log into your account (see page 2 of this document for details)

b. Click the "+" sign at the bottom right of the Application screen. This will allow you to temporarily add and configure your customers system inside your personal account. A system refers to the Antenna being installed in the windsheild of the vehicle.

c. Before adding a system to your device, ensure the remote starter IS NOT armed/locked or in Valet mode and set the ignition of the vehicle to the On position.

d. Then Tap to "Scan QR Code" and use the smartphone camera to scan the QR Code located on top of the antenna.

e. Once connected, the system is in "Installer Mode". Follow the on-screen instructions for configuring the system.

STEP 4. PRE-CONFIGURE THE APPLICATION EXPERIENCE FOR YOUR CUSTOMER

a. Start by setting the protocol of the antenna being used. This is acheived by selecting the Brand, Model and protocol used inside the Remote starter. When done, click on "Confirm". System will now try to communicate with the remote starter to confirm that all settings related to protocol are valid.

b. Once back in the control panel, click on the Settings Gear at the top right of the screen and edit the Vehicle name, configure the Auxiliaries that might have been added (if applicable) and click "OK" when done. Then choose the vehicle to display inside the control panel in the VEHICLE IMAGE section and click OK.

c. When your configurations are all completed, click "OK" at the top right corner. All Configurations will take effect.

STEP 5. TESTING THE SYSTEM

When the system is connected and fully configured, testing can begin. Test all the application functions (Start, Stop, Lock, Unlock, Auxiliaries, Etc.) When testing is completed, tap on the "installer icon" at the top of control screen. When prompted Click "Yes, and delete system from account" since this is the installer mode and not the End User mode. This will make the system "Ready for Customer Delivery".

Also make sure that the Owners Card is handed to the Owner of the vehicle or attached to the vehicle keychain. Doing this will ensure that the instructions on how to setup their App, Account and add the System is done correctly by using the system QR Code affixed on the windsheild mounted antenna.

NOTE : UNDER ANY CIRCUMSTANCES, PLEASE DO NOT REMOVE THE QR CODE FROM THE ANTENNA!

CAR:LINK™ INSTALLATION, WIRING & PROGRAMMING GUIDE

PARTS REQUIRED FOR INSTALLATION OF : OMEGA OL-RS

XTX-3000	IVU-CAB-4W	Omega OL-RS	

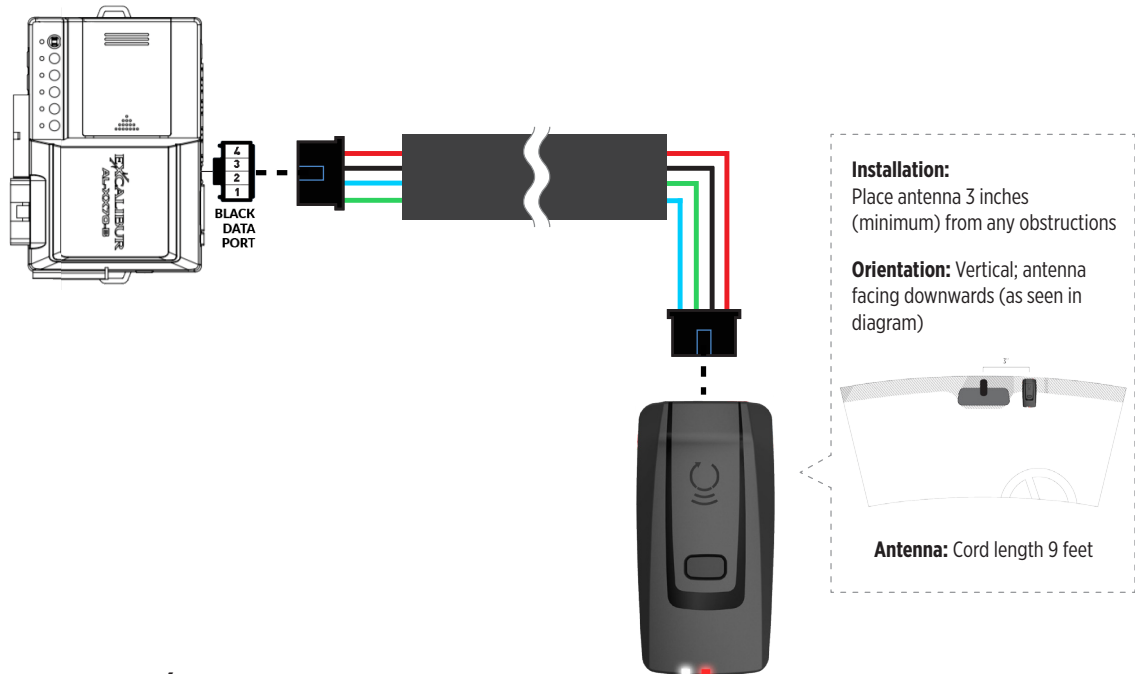## STEP 1. CONFIGURE THE REMOTE STARTER

The ADS Weblink (ADS-USB) is required to properly configure the Omega OL-RS remote starter to accept the RF kit system. When flashing the Omega OL-RS remote starter, **please follow this procedure in order to configure correctly your remote starter.**

a. Go to **ww.omegaweblink.com** and click on "Flash your module"	**FLASH YOUR MODULE**
b. Choose vehicle Make, Model, Year, Trim	FILTER: Select a make ▼ All Years ▼ All models ▼ All trims ▼ NEXT →
c. Choose "Excalibur RF Kit & Connected SmartControl"	○ Excalibur RF Kit & Connected SmartControl
d. This will load a firmware starting with:	**"OL-XX(XX)-XXX (X.X)"**
e. Click "Flash!"	**FLASH →**

CAR:LINK™ INSTALLATION, WIRING & PROGRAMMING GUIDE

STEP 2. CONNECT

BLUE TELEMATICS PORT

Installation:
Place antenna 3 inches (minimum) from any obstructions

Orientation: Vertical; antenna facing downwards (as seen in diagram)

Antenna: Cord length 9 feet

STEP 3. ADD A DEVICE/VEHICLE TO AN ACCOUNT

a. Download the App and Log into your account (see page 2 of this document for details)

b. Click the "+" sign at the bottom right of the Application screen. This will allow you to temporarily add and configure your customers system inside your personal account. A system refers to the Antenna being installed in the windsheild of the vehicle.

c. Before adding a system to your device, ensure the remote starter IS NOT armed/locked or in Valet mode and set the ignition of the vehicle to the On position.

d. Then Tap to "Scan QR Code" and use the smartphone camera to scan the QR Code located on top of the antenna.

e. Once connected, the system is in "Installer Mode". Follow the on-screen instructions for configuring the system.

STEP 4. PRE-CONFIGURE THE APPLICATION EXPERIENCE FOR YOUR CUSTOMER

a. Start by setting the protocol of the antenna being used. This is acheived by selecting the Brand, Model and protocol used inside the Remote starter. When done, click on "Confirm". System will now try to communicate with the remote starter to confirm that all settings related to protocol are valid.

b. Once back in the control panel, click on the Settings Gear at the top right of the screen and edit the Vehicle name, configure the Auxiliaries that might have been added (if applicable) and click "OK" when done. Then choose the vehicle to display inside the control panel in the VEHICLE IMAGE section and click OK.

c. When your configurations are all completed, click "OK" at the top right corner. All Configurations will take effect.

STEP 5. TESTING THE SYSTEM

When the system is connected and fully configured, testing can begin. Test all the application functions (Start, Stop, Lock, Unlock, Auxiliaries, Etc.) When testing is completed, tap on the "installer icon" at the top of control screen. When prompted Click "Yes, and delete system from account" since this is the installer mode and not the End User mode. This will make the system "Ready for Customer Delivery".

Also make sure that the Owners Card is handed to the Owner of the vehicle or attached to the vehicle keychain. Doing this will ensure that the instructions on how to setup their App, Account and add the System is done correctly by using the system QR Code affixed on the windsheild mounted antenna.

NOTE : UNDER ANY CIRCUMSTANCES, PLEASE DO NOT REMOVE THE QR CODE FROM THE ANTENNA!

CAR:LINK™ INSTALLATION, WIRING & PROGRAMMING GUIDE

PARTS REQUIRED FOR INSTALLATION OF : MIDCITY SMARTKEY STARTER

XTX-3000	IVU-CAB-4W	NG Remote Starter	

STEP 1. CONFIGURE THE REMOTE STARTER

The Smartkey Starter NG series is already pre-configured to accept the telematics device. No extra programming required.

CAR:LINK™ INSTALLATION, WIRING & PROGRAMMING GUIDE

STEP 2. CONNECT

Installation:
Place antenna 3 inches (minimum) from any obstructions

Orientation: Vertical; antenna facing downwards (as seen in diagram)

Antenna: Cord length 9 feet

STEP 3. ADD A DEVICE/VEHICLE TO AN ACCOUNT

a. Download the App and Log into your account (see page 2 of this document for details)

b. Click the "+" sign at the bottom right of the Application screen. This will allow you to temporarily add and configure your customers system inside your personal account. A system refers to the Antenna   being installed in the windsheild of the vehicle.

c. Before adding a system to your device, ensure the remote starter IS NOT armed/locked or in Valet mode and set the ignition of the vehicle to the On position.

d. Then Tap to "Scan QR Code" and use the smartphone camera to scan the QR Code located on top of the antenna.

e. Once connected, the system is in "Installer Mode". Follow the on-screen instructions for configuring the system.

STEP 4. PRE-CONFIGURE THE APPLICATION EXPERIENCE FOR YOUR CUSTOMER

a. Start by setting the protocol of the antenna being used. This is acheived by selecting the Brand, Model and protocol used inside the Remote starter. When done, click on "Confirm". System will now try to communicate with the remote starter to confirm that all settings related to protocol are valid.

b. Once back in the control panel, click on the Settings Gear at the top right of the screen and edit the Vehicle name, configure the Auxiliaries that might have been added (if applicable) and click "OK" when done. Then choose the vehicle to display inside the control panel in the VEHICLE IMAGE section and click OK.

c. When your configurations are all completed, click "OK" at the top right corner. All Configurations will take effect.

STEP 5. TESTING THE SYSTEM

When the system is connected and fully configured, testing can begin. Test all the application functions (Start, Stop, Lock, Unlock, Auxiliaries, Etc.) When testing is completed, tap on the "installer icon" at the top of control screen. When prompted Click "Yes, and delete system from account" since this is the installer mode and not the End User mode. This will make the system "Ready for Customer Delivery".

Also make sure that the Owners Card is handed to the Owner of the vehicle or attached to the vehicle keychain. Doing this will ensure that the instructions on how to setup their App, Account and add the System is done correctly by using the system QR Code affixed on the windsheild mounted antenna.

NOTE : UNDER ANY CIRCUMSTANCES, PLEASE DO NOT REMOVE THE QR CODE FROM THE ANTENNA!
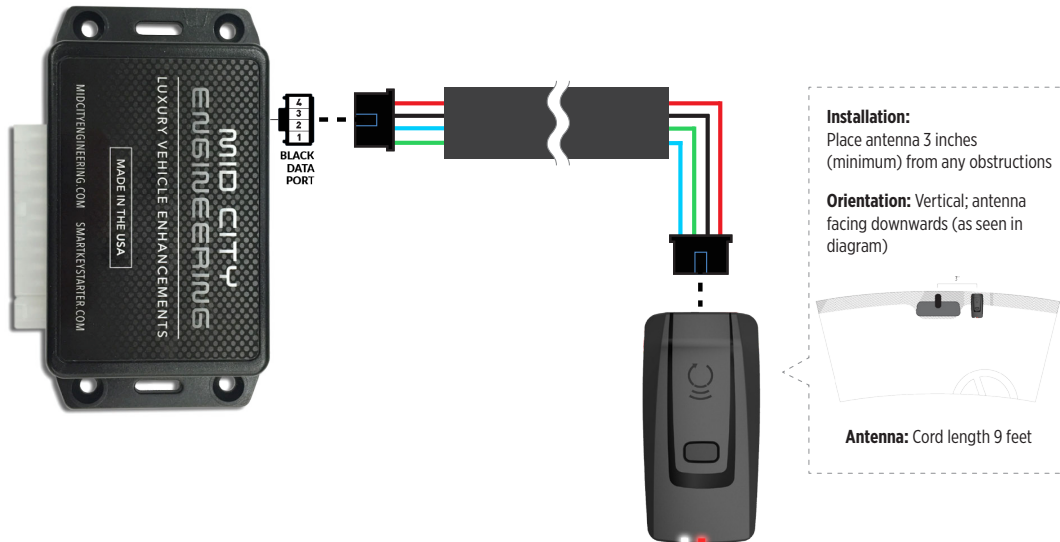
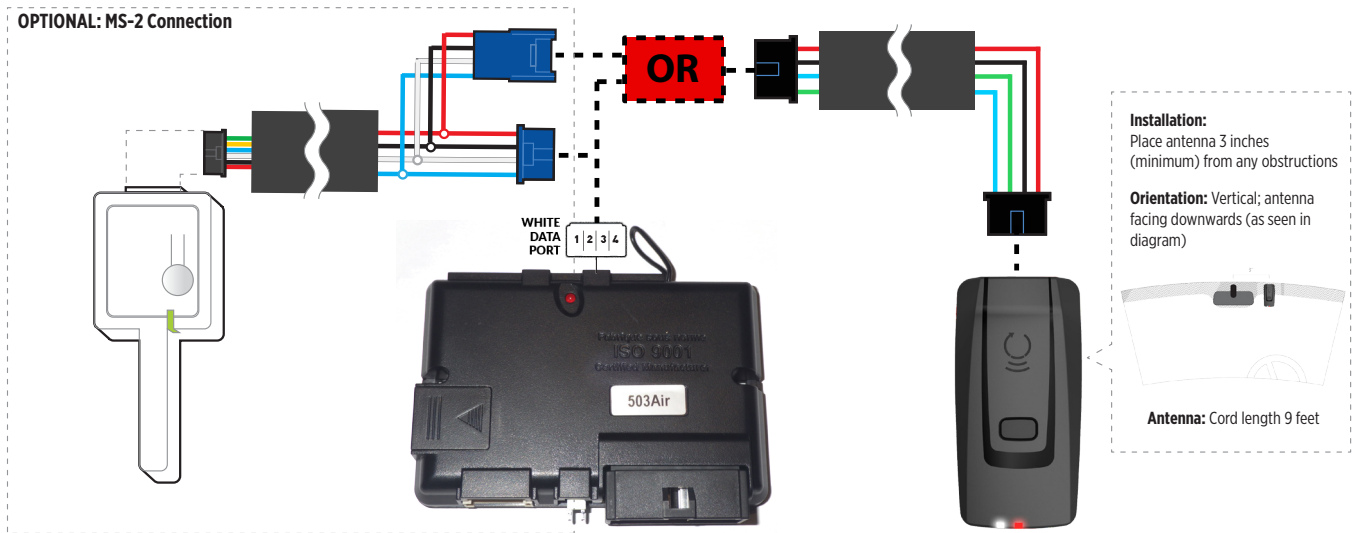## PARTS REQUIRED FOR INSTALLATION OF : DSE 503AIR 5R-85

XTX-3000	IVU-CAB-4W	DSE 503AIR 5R85	

STEP 1. CONFIGURE THE REMOTE STARTER

The 503Air is already pre-configured to accept the RF kit system. No extra programming required.

STEP 2. CONNECT

OPTIONAL: MS-2 Connection

OR

WHITE DATA PORT | 1 2 3 4

503Air

Installation:
Place antenna 3 inches (minimum) from any obstructions

Orientation: Vertical; antenna facing downwards (as seen in diagram)

Antenna: Cord length 9 feet

STEP 3. ADD A DEVICE/VEHICLE TO AN ACCOUNT

a. Download the App and Log into your account (see page 2 of this document for details)

b. Click the "+" sign at the bottom right of the Application screen. This will allow you to temporarily add and configure your customers system inside your personal account. A system refers to the Antenna being installed in the windsheild of the vehicle.

c. Before adding a system to your device, ensure the remote starter IS NOT armed/locked or in Valet mode and set the ignition of the vehicle to the On position.

d. Then Tap to "Scan QR Code" and use the smartphone camera to scan the QR Code located on top of the antenna.

e. Once connected, the system is in "Installer Mode". Follow the on-screen instructions for configuring the system.

STEP 4. PRE-CONFIGURE THE APPLICATION EXPERIENCE FOR YOUR CUSTOMER

a. Start by setting the protocol of the antenna being used. This is acheived by selecting the Brand, Model and protocol used inside the Remote starter. When done, click on "Confirm". System will now try to communicate with the remote starter to confirm that all settings related to protocol are valid.

b. Once back in the control panel, click on the Settings Gear at the top right of the screen and edit the Vehicle name, configure the Auxiliaries that might have been added (if applicable) and click "OK" when done. Then choose the vehicle to display inside the control panel in the VEHICLE IMAGE section and click OK.

c. When your configurations are all completed, click "OK" at the top right corner. All Configurations will take effect.
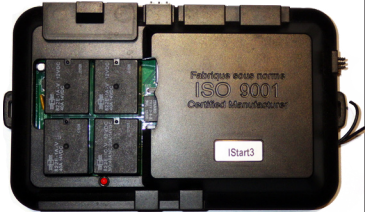
STEP 5. TESTING THE SYSTEM

When the system is connected and fully configured, testing can begin. Test all the application functions (Start, Stop, Lock, Unlock, Auxiliaries, Etc.) When testing is completed, tap on the "installer icon" at the top of control screen. When prompted Click "Yes, and delete system from account" since this is the installer mode and not the End User mode. This will make the system "Ready for Customer Delivery".

Also make sure that the Owners Card is handed to the Owner of the vehicle or attached to the vehicle keychain. Doing this will ensure that the instructions on how to setup their App, Account and add the System is done correctly by using the system QR Code affixed on the windsheild mounted antenna.

NOTE : UNDER ANY CIRCUMSTANCES, PLEASE DO NOT REMOVE THE QR CODE FROM THE ANTENNA!

CAR:LINK™ INSTALLATION, WIRING & PROGRAMMING GUIDE

PARTS REQUIRED FOR INSTALLATION OF : DSE iSTART2 - 3

XTX-3000	IVU-CAB-4W	DSE iStart2 - 3 CI3R-86	BLADE-AL (64)

STEP 1. CONFIGURE THE REMOTE STARTER

The ADS Weblink (ADS-USB) is required to properly configure the iStart2 - iStart3 remote starter to accept the RF kit system. When flashing the iStart2 - iStart3 remote starter, **please follow this procedure in order to configure correctly your remote starter.**

a. Go to **www.idatalink.com** and click on "Flash your module"	FLASH YOUR MODULE
b. Under the ADS-BLADE AL tab, Choose vehicle Make, Model, Year, Trim	VEHICLE SELECTION · FILTER: Select a make / All Years / All models / All trims · NEXT→
c. Click "Flash!"	FLASH→
d. Once done click on the Remote Starter tab and click on "Flash my starter" in order to update the remote starter firmware	FLASH MY STARTER
e. Click "Flash!"	FLASH→

CAR:LINK™ INSTALLATION, WIRING & PROGRAMMING GUIDE

STEP 2. CONNECT

OPTIONAL: MS-2 Connection

OR

WHITE DATA PORT | 1 | 2 | 3 | 4

Installation: Place antenna 3 inches (minimum) from any obstructions

Orientation: Vertical; antenna facing downwards (as seen in diagram)

Antenna: Cord length 9 feet

STEP 3. ADD A DEVICE/VEHICLE TO AN ACCOUNT

a. Download the App and Log into your account (see page 2 of this document for details)

b. Click the "+" sign at the bottom right of the Application screen. This will allow you to temporarily add and configure your customers system inside your personal account. A system refers to the Antenna being installed in the windsheild of the vehicle.

c. Before adding a system to your device, ensure the remote starter IS NOT armed/locked or in Valet mode and set the ignition of the vehicle to the On position.

d. Then Tap to "Scan QR Code" and use the smartphone camera to scan the QR Code located on top of the antenna.

e. Once connected, the system is in "Installer Mode". Follow the on-screen instructions for configuring the system.

STEP 4. PRE-CONFIGURE THE APPLICATION EXPERIENCE FOR YOUR CUSTOMER

a. Start by setting the protocol of the antenna being used. This is acheived by selecting the Brand, Model and protocol used inside the Remote starter. When done, click on "Confirm". System will now try to communicate with the remote starter to confirm that all settings related to protocol are valid.

b. Once back in the control panel, click on the Settings Gear at the top right of the screen and edit the Vehicle name, configure the Auxiliaries that might have been added (if applicable) and click "OK" when done. Then choose the vehicle to display inside the control panel in the VEHICLE IMAGE section and click OK.

c. When your configurations are all completed, click "OK" at the top right corner. All Configurations will take effect.

STEP 5. TESTING THE SYSTEM

When the system is connected and fully configured, testing can begin. Test all the application functions (Start, Stop, Lock, Unlock, Auxiliaries, Etc.) When testing is completed, tap on the "installer icon" at the top of control screen. When prompted Click "Yes, and delete system from account" since this is the installer mode and not the End User mode. This will make the system "Ready for Customer Delivery".

Also make sure that the Owners Card is handed to the Owner of the vehicle or attached to the vehicle keychain. Doing this will ensure that the instructions on how to setup their App, Account and add the System is done correctly by using the system QR Code affixed on the windsheild mounted antenna.

NOTE : UNDER ANY CIRCUMSTANCES, PLEASE DO NOT REMOVE THE QR CODE FROM THE ANTENNA!

System LED Status & Protocol Reference Chart

LED Status	Protocol		
	Name	**inside Application**	**inside Remote Starter**
1x Flash	Connected RF protocol	Connected RF	IDPP
2x Flashes	Directed protocol	SMARTSTART	SMARTSTART
3x Flashes	ADS Telematics protocol	ADS TEL	ADS TEL or DRONE
4x Flashes	Fortin protocol	Fortin 2	Fortin 2
5x Flashes	Compustar	Drone	Drone
6x Flashes	Posse protocol	Voxx Tel	Voxx Tel
7x Flashes	N/A	N/A	N/A
8x Flashes	No protocol - (Default)	N/A	N/A

Reset Procedure

1 - Disconnect the main harness from the Antenna.
2 - Wait approximately 10 seconds and reconnect the main harness to the Antenna.
3 - Reset procedure Completed.

CAR:LINK™